



Item : 40-D31-1101N

WWW.REFORMAUTO.RU OOO «PE-A

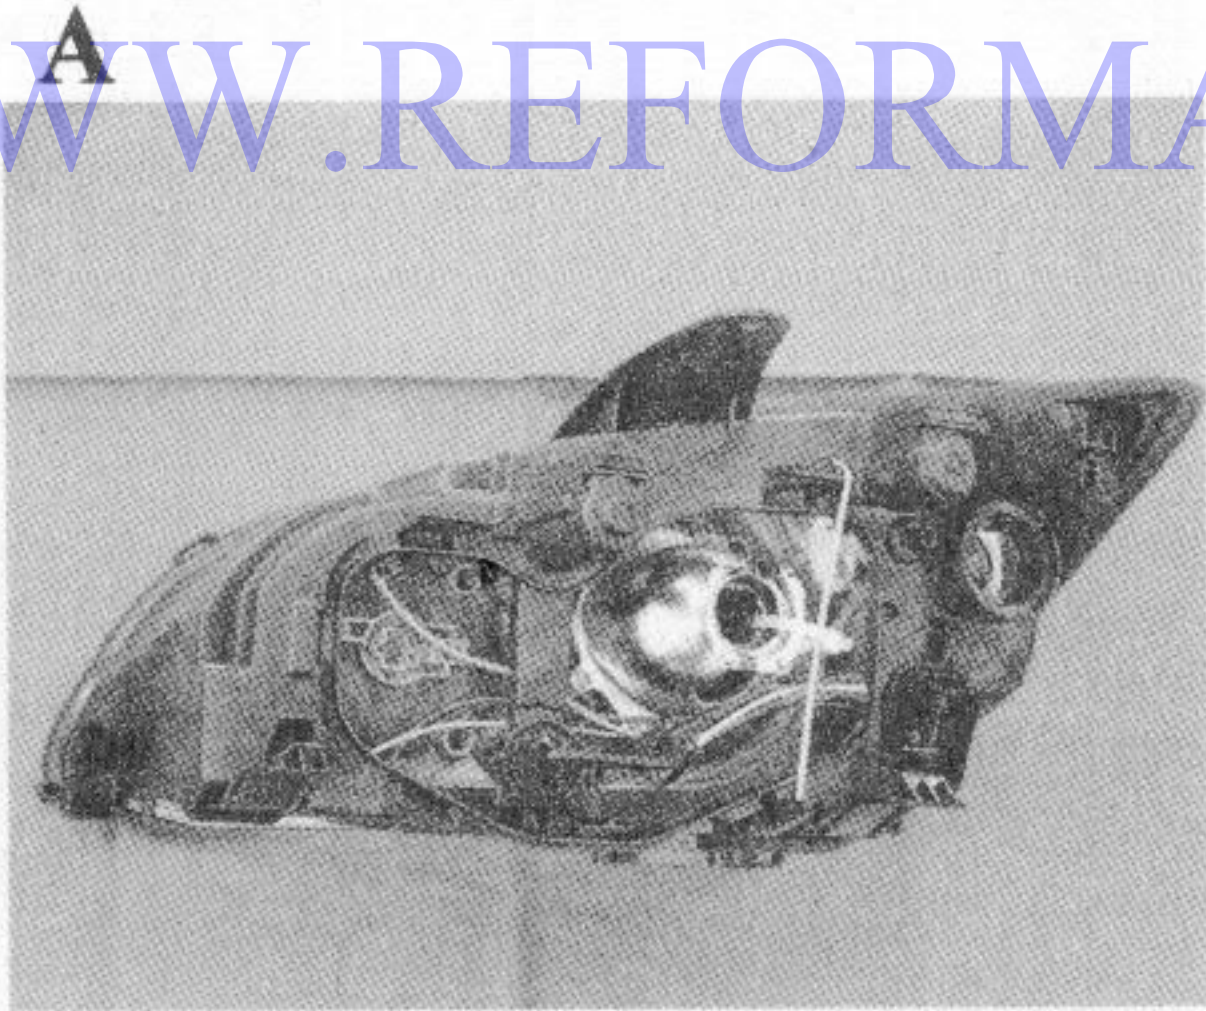

1. 圖 A 為客戶收到產品時的組裝狀態。

Picture(A) the final status clients received.

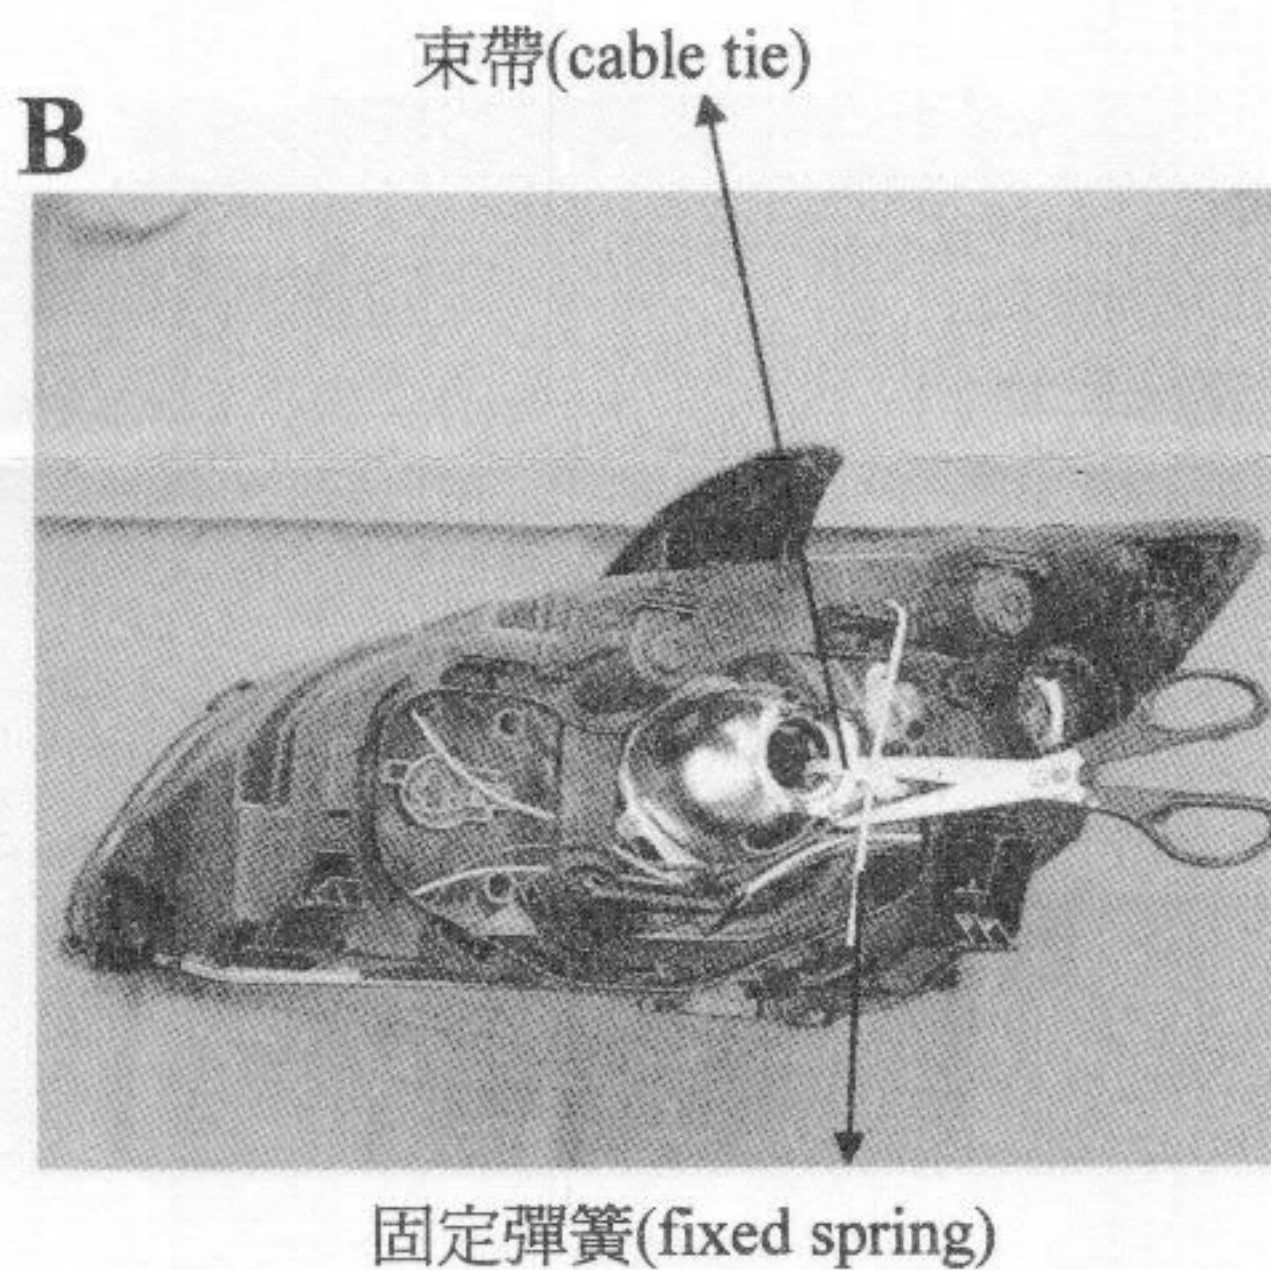

2. 圖 B 請將束帶剪下並將束帶及固定彈簧去除。

Picture(B) cut the cable tie, then take out the cable tie and the spring.




3. 圖 C 裝上護蓋。

Picture(C) install the cover


40-431-1169 說明書

40-431-1169 INSTRUCTIONS


WWW.REFORMAUTO.RU OOO «PE-A

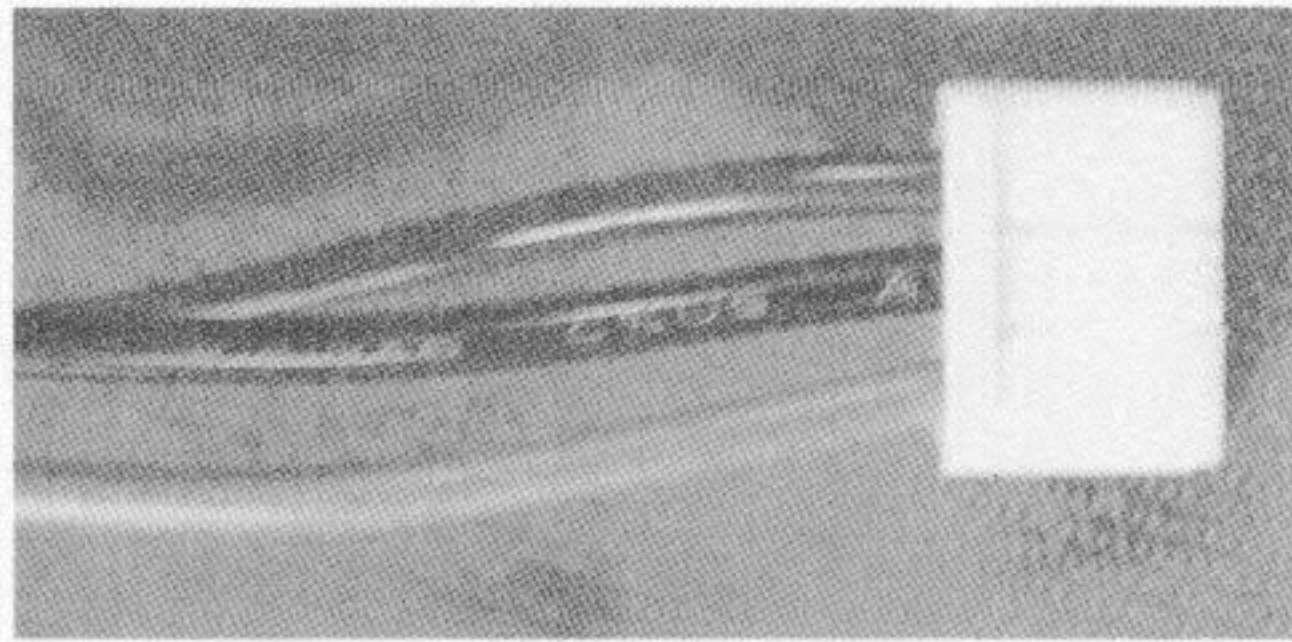


(圖四) (FIG.4)

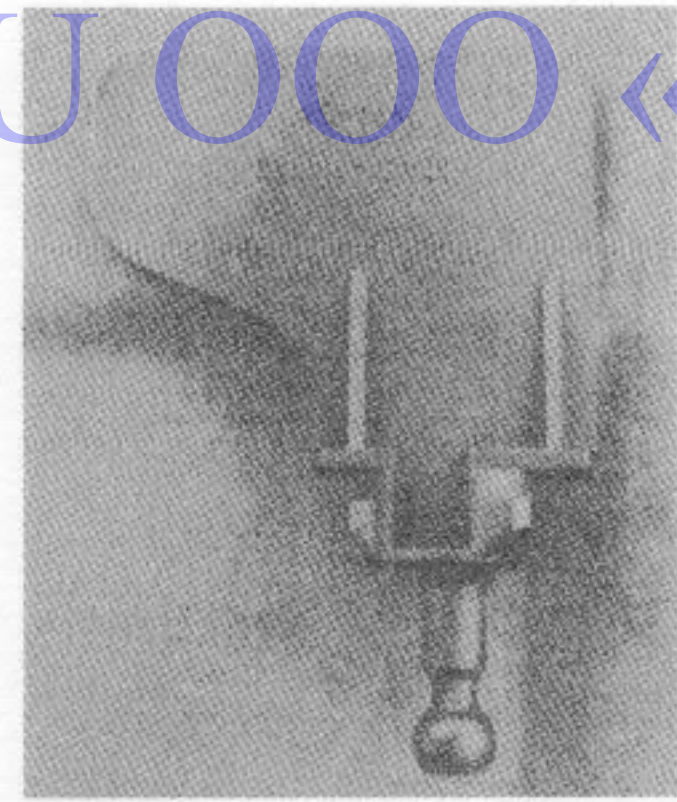

(圖二) (FIG.2)

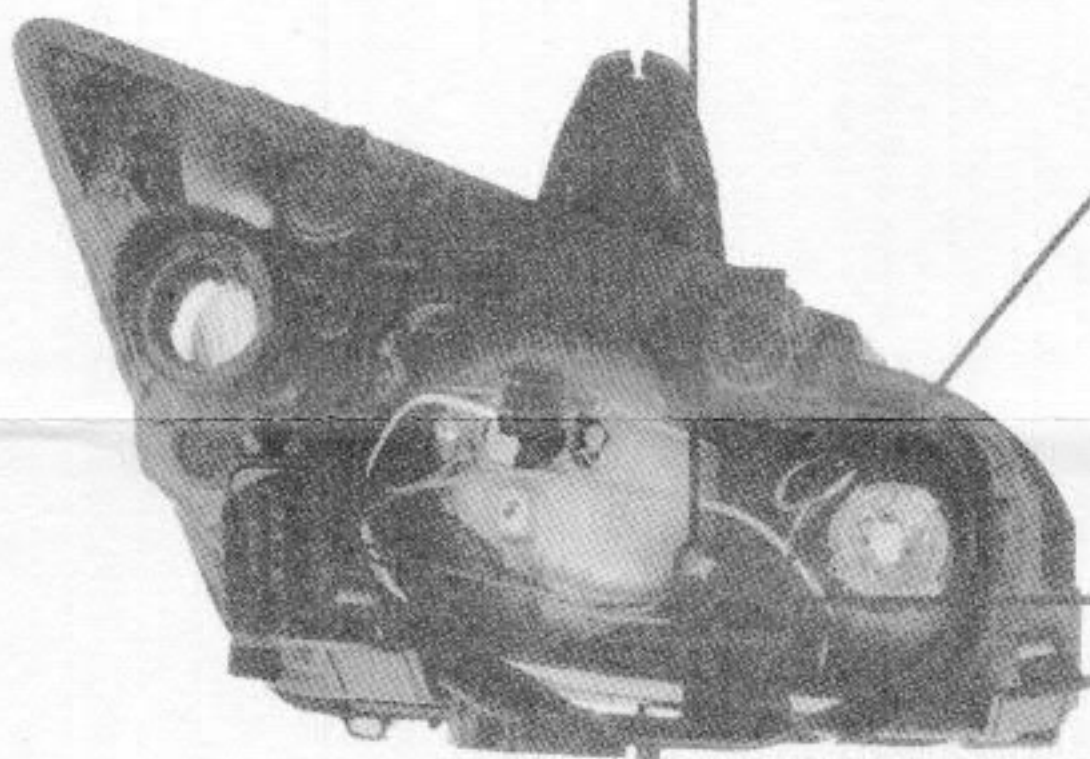

(圖一) (FIG.1)

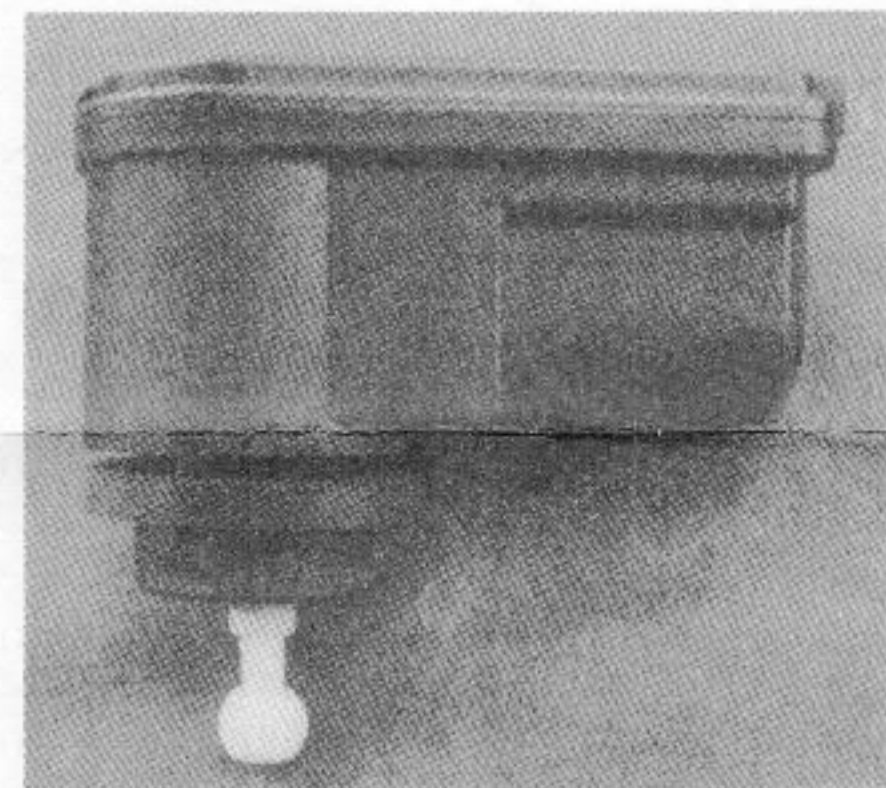

(圖三) (FIG.3)

1. 當原廠車燈(圖一)處，配合件為(圖二)所示之固定座時，此說明書請省略不看。
Please ignore the instructions if the mating part of original lamp (FIG.1) is the mounting bracket as shown in FIG.2.
2. 當原廠車燈(圖一)處，配合件為(圖三)所示之自調馬達時，請依下列說明操作：
Please follow the operating steps if the mating part of original lamp (FIG.1) is the self-adjusting motor as shown in FIG.3.
 - (1) 請將購買之車燈，(圖二)所示之固定座取出，並更換成原廠之自調馬達，配合方式同原配合。
Please take out the mounting bracket (FIG.2) and install original self-adjusting motor. The mating method is the same with original one.
 - (2) 將(圖四)之線組插頭，插至原廠自調馬達上即可。
Please connect the plug of harnesses (FIG.4) to the original self-adjusting motor.