

2006 CIVIC
FOG LIGHT INSTALLATION INSTRUCTIONS


217-2033N

PARTS LIST:

Right fog light




Foamed washer

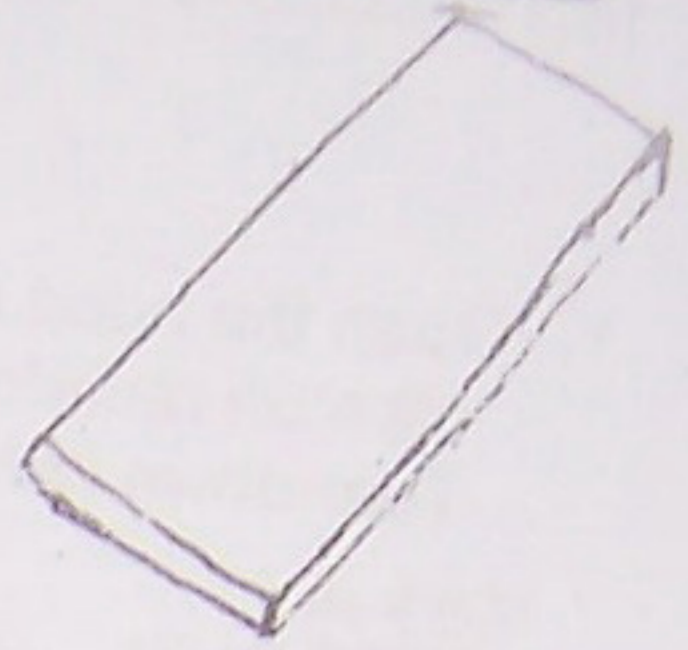

Left fog light



Switch harness

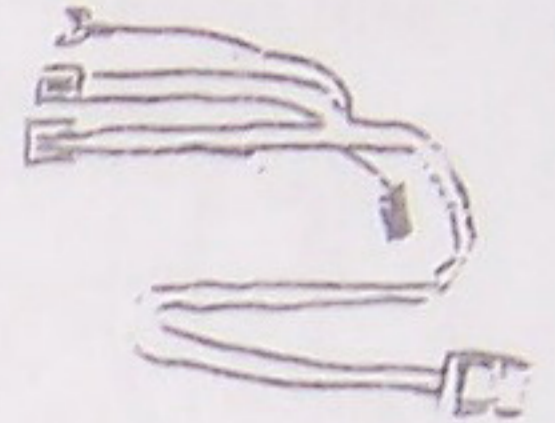


Right bracket No.1



Vehicle harness



Left bracket No.1

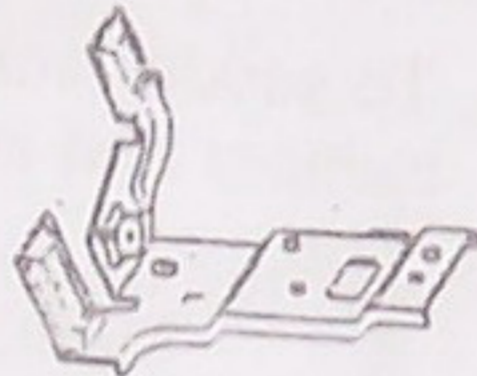

Sub harness



Bracket No.2




Switch



Right bracket No.3



Wire tie x 10

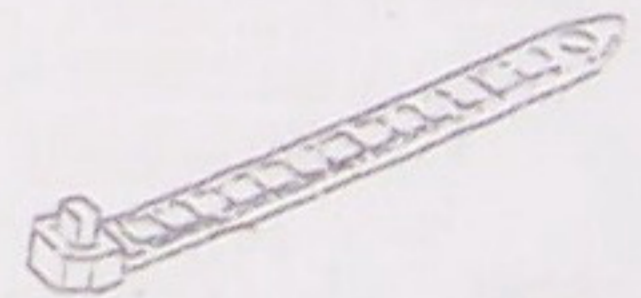

Left bracket No.3



Stepped screw x 6



Bracket No.4



Washer screw x 4



Ornate plate (R)




Fuse (20A)



Ornate plate (L)



Relay

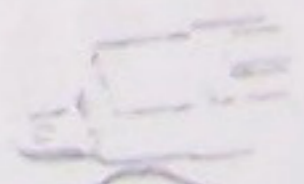

Wire tie with clip x 2



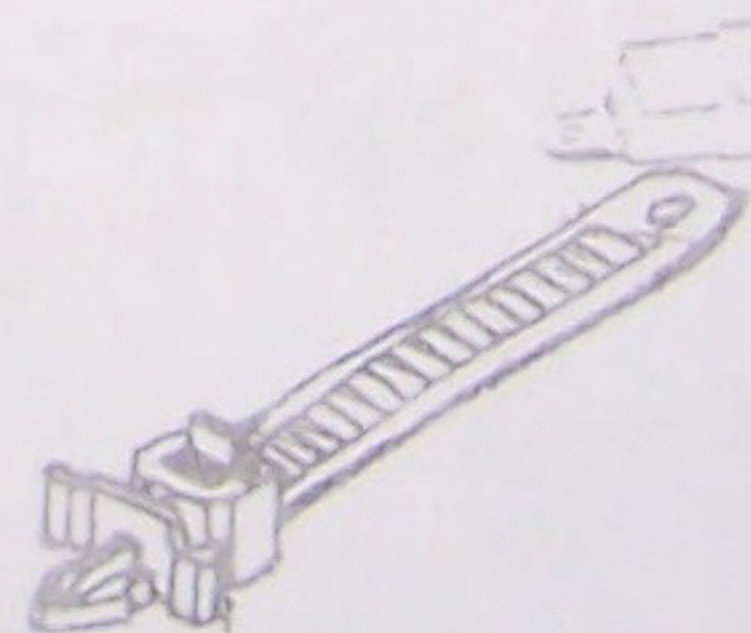


ILLUSTRATION OF THE FOG LIGHT
INSTALLED ON THE VEHICLE:


1. Open the hood and take out two expansion clips on radiator cover and two clips. Tear-down radiator cover.

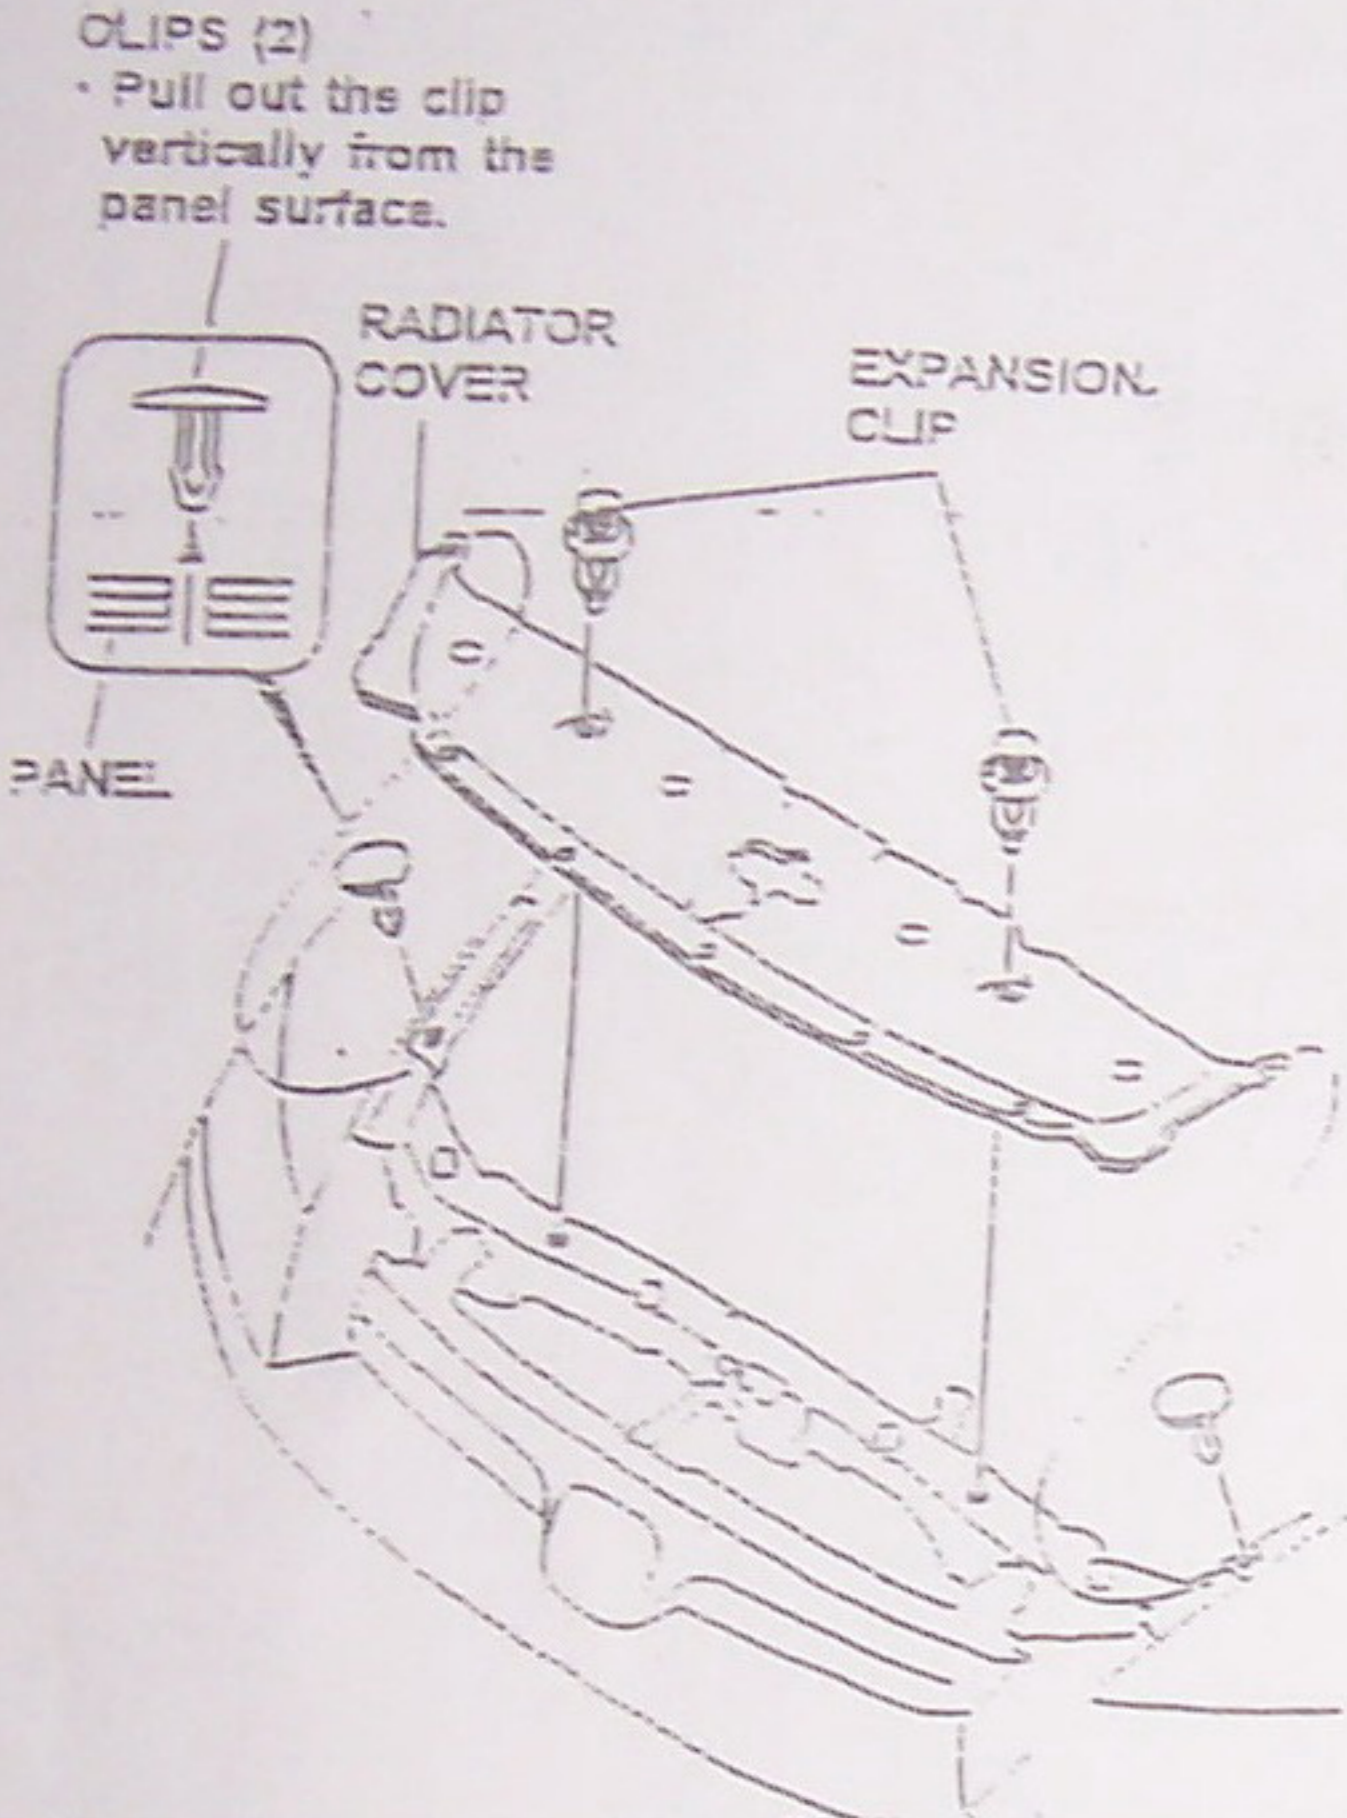


2. Tear-down ten clips and two self-tapping screws of front bumper, and take off front bumper.

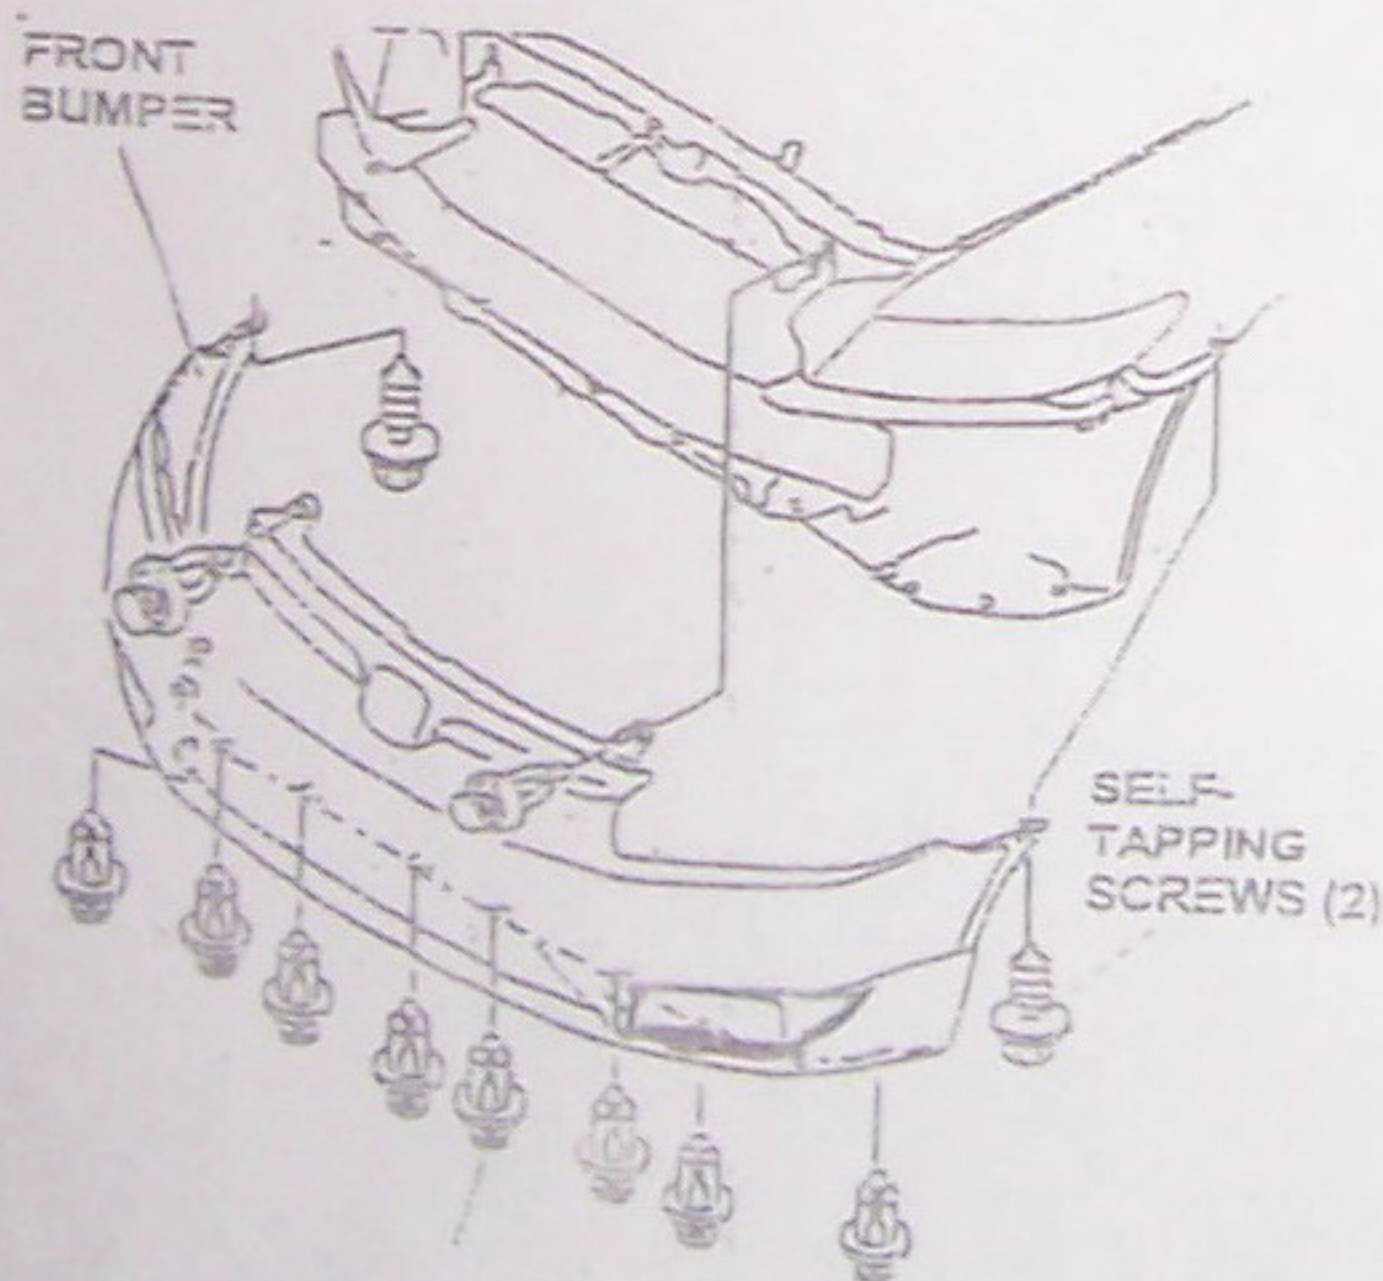


3. To cut out the area from the bumper by utility knife.

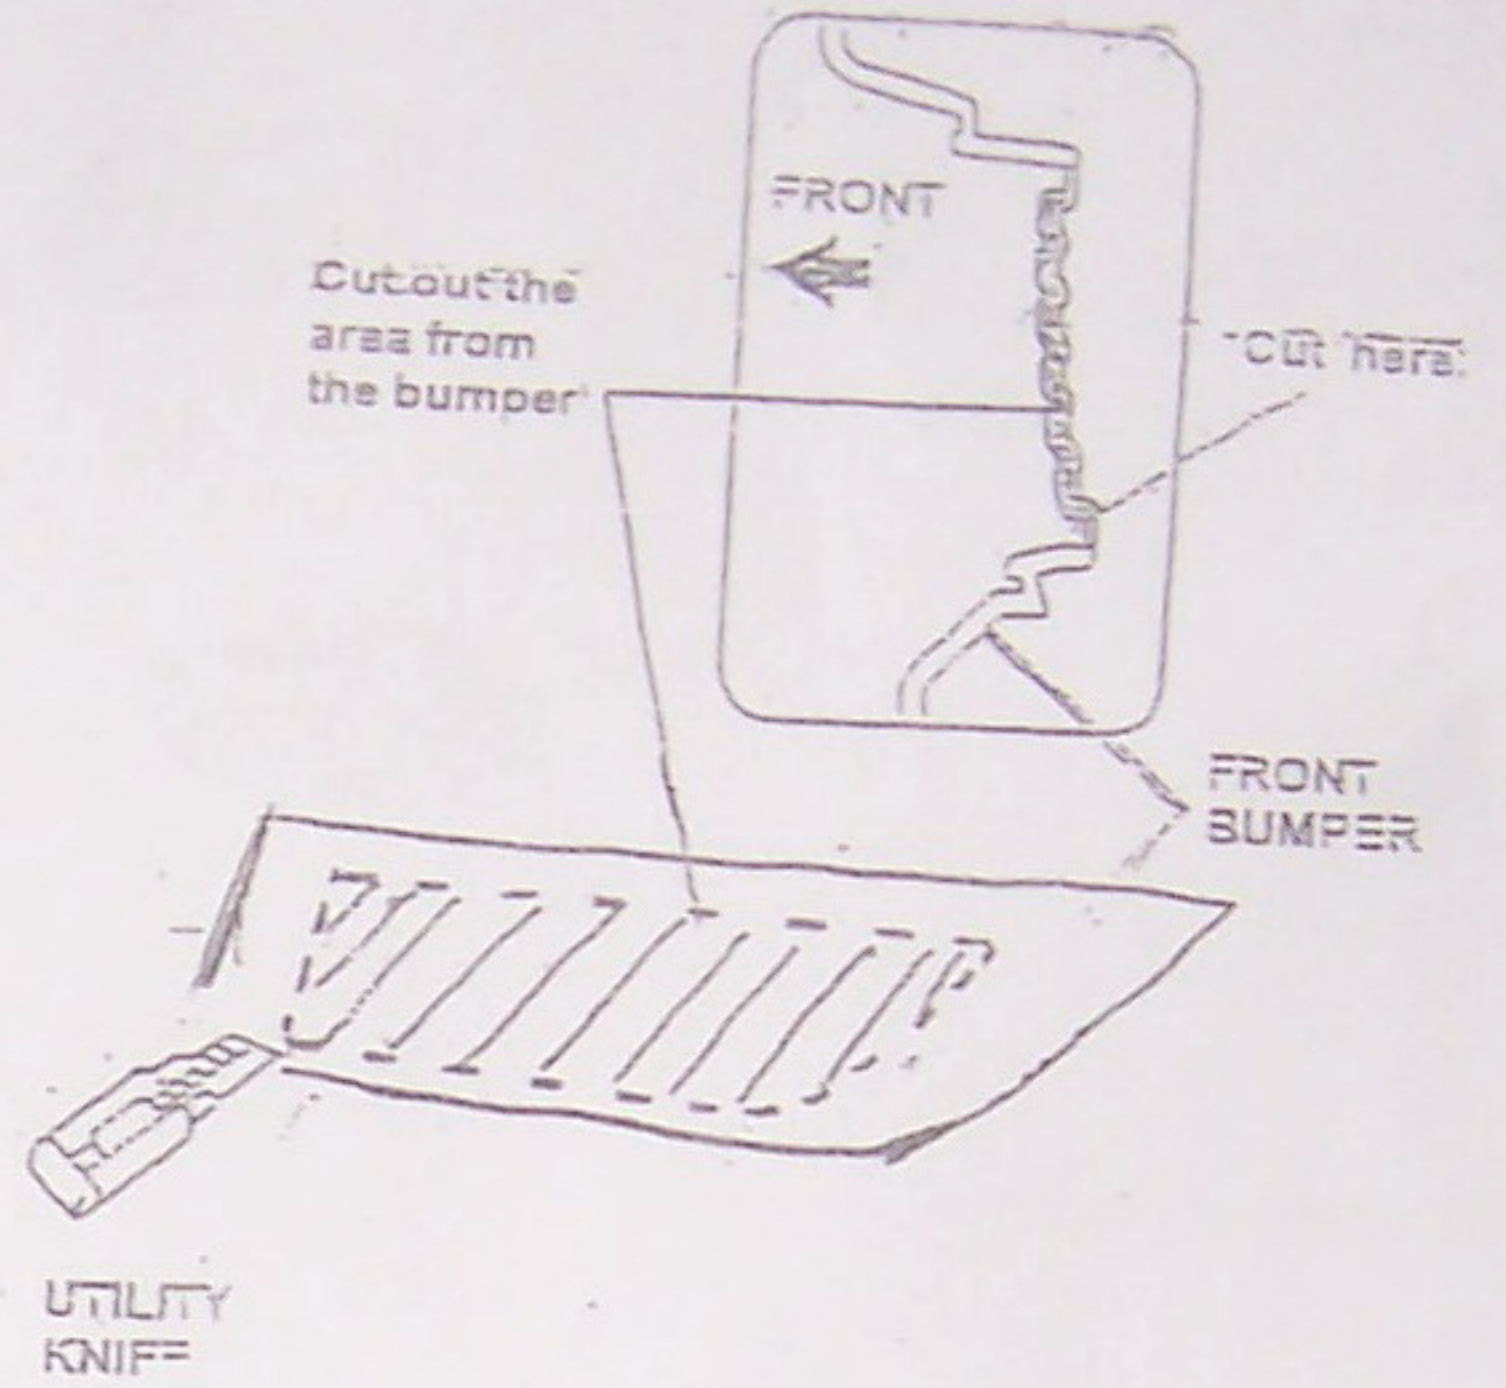


4. To secure bracket 1 & 3 on the front bumper and install on fog light and ornate plate.

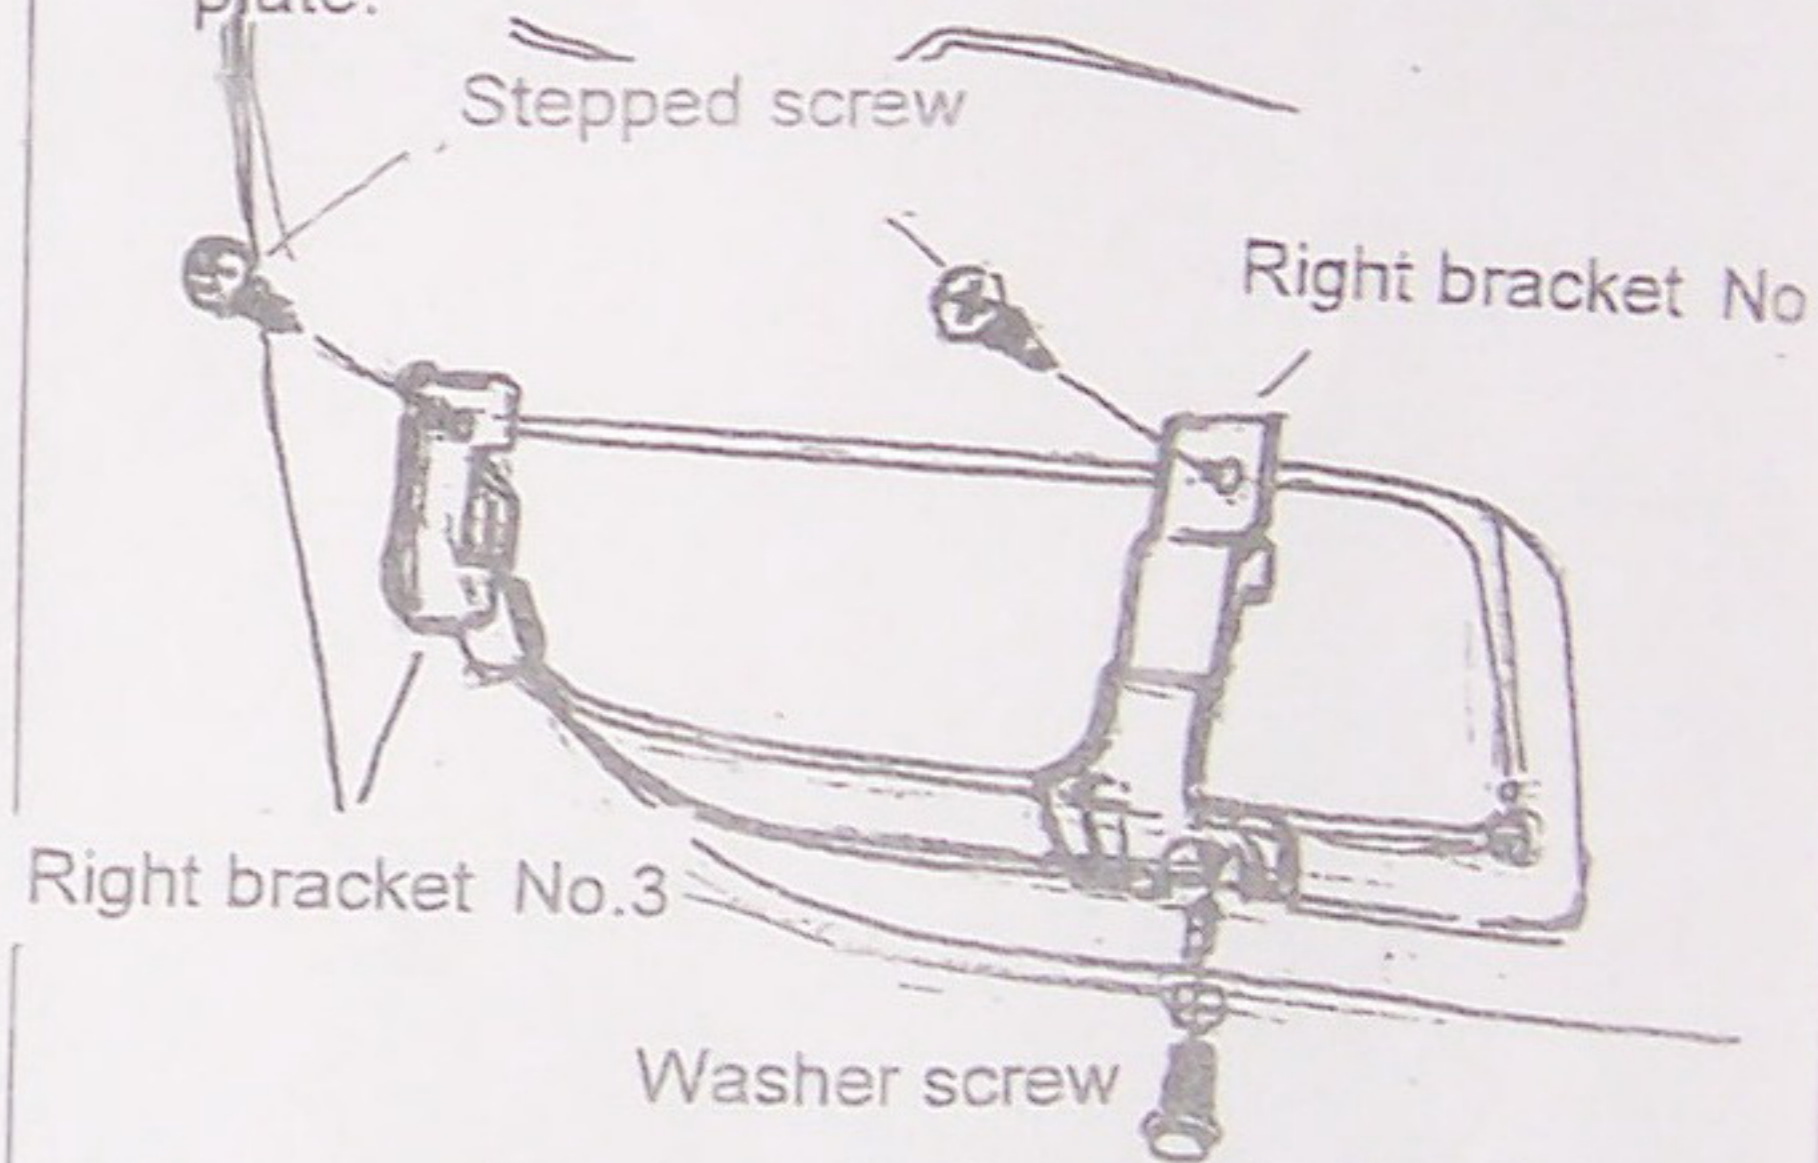


5. Connect the plug of bulb to the bulb of fog light.

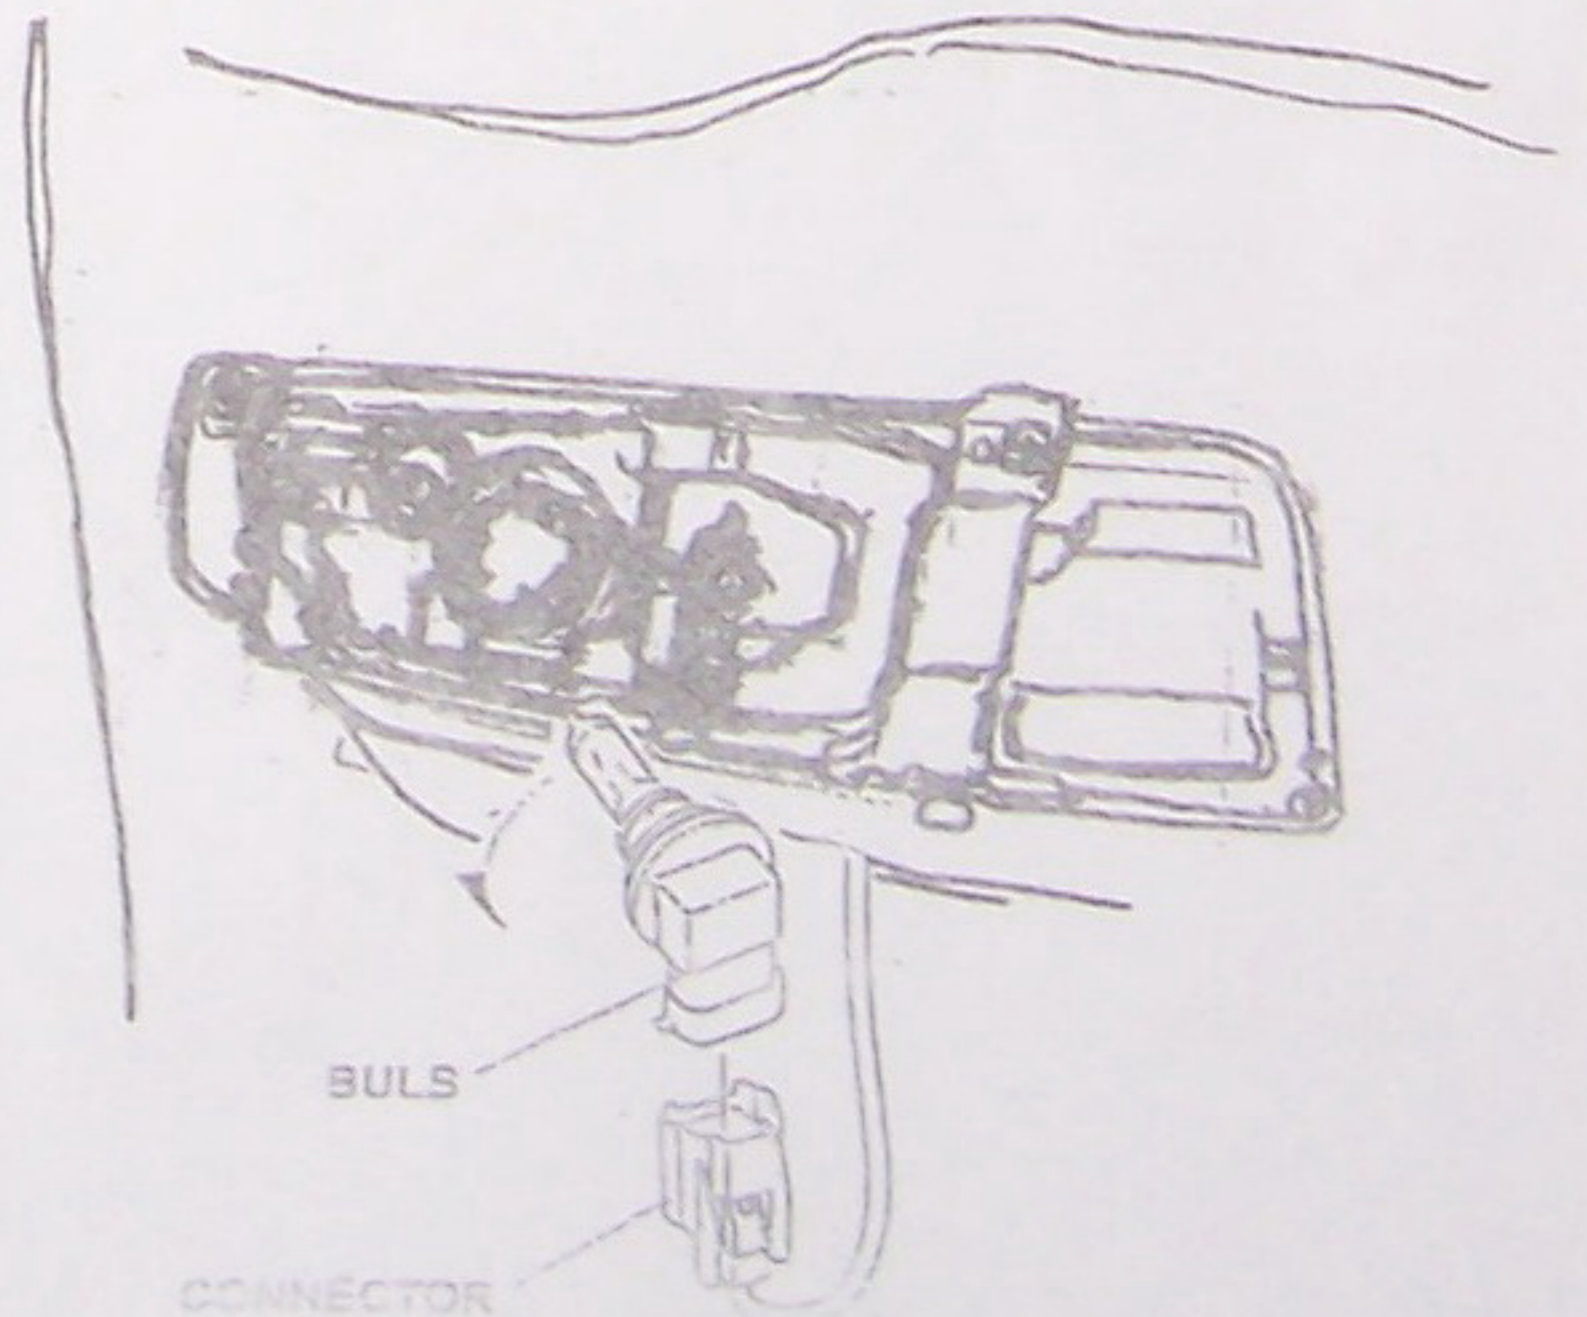


6. Connect the 1-pin connector of reserved vehicle harness to the 1-pin connector of sub harness.

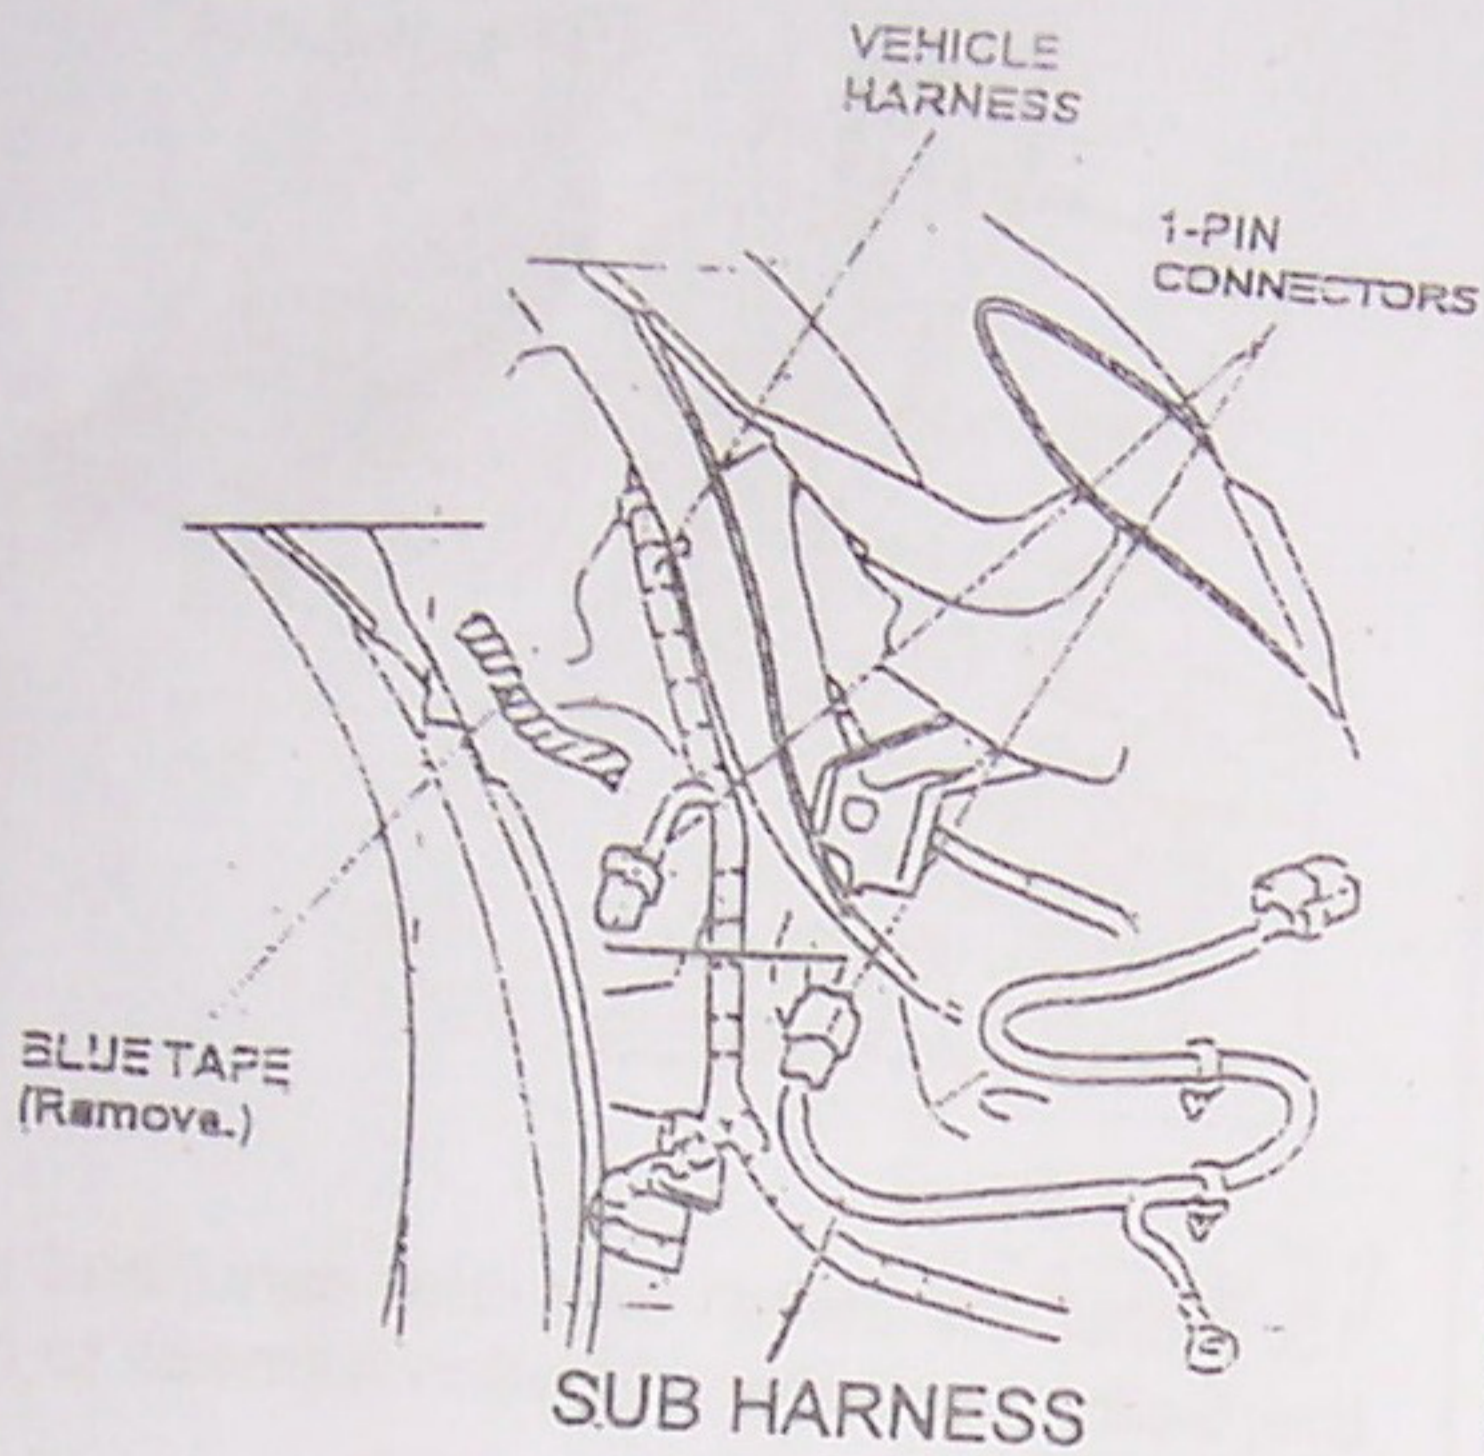

7. Screw the ground terminal of sub harness to vehicle panel.

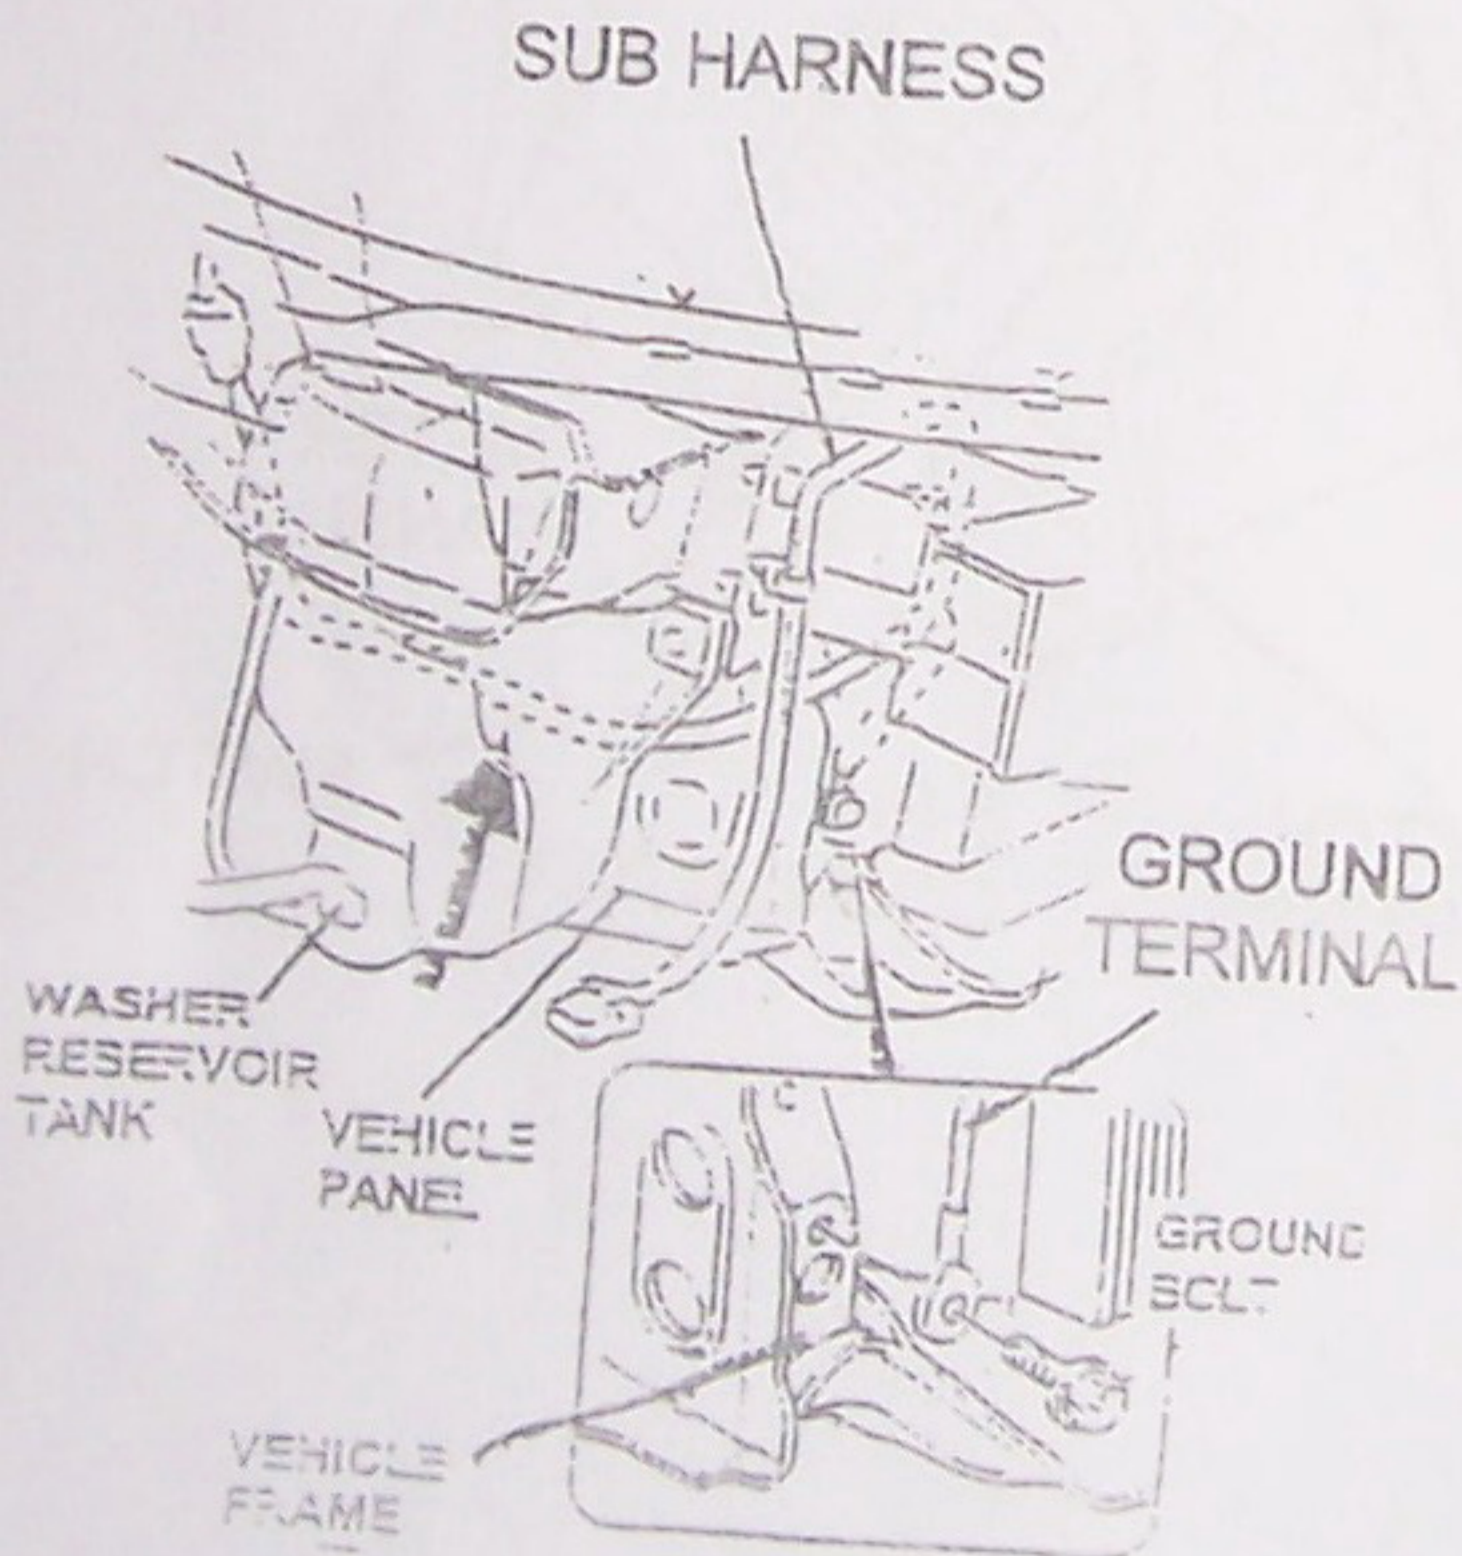


8. Connect 2-pin connector of vehicle harness to 2-pin connector of sub harness and then install front bumper.

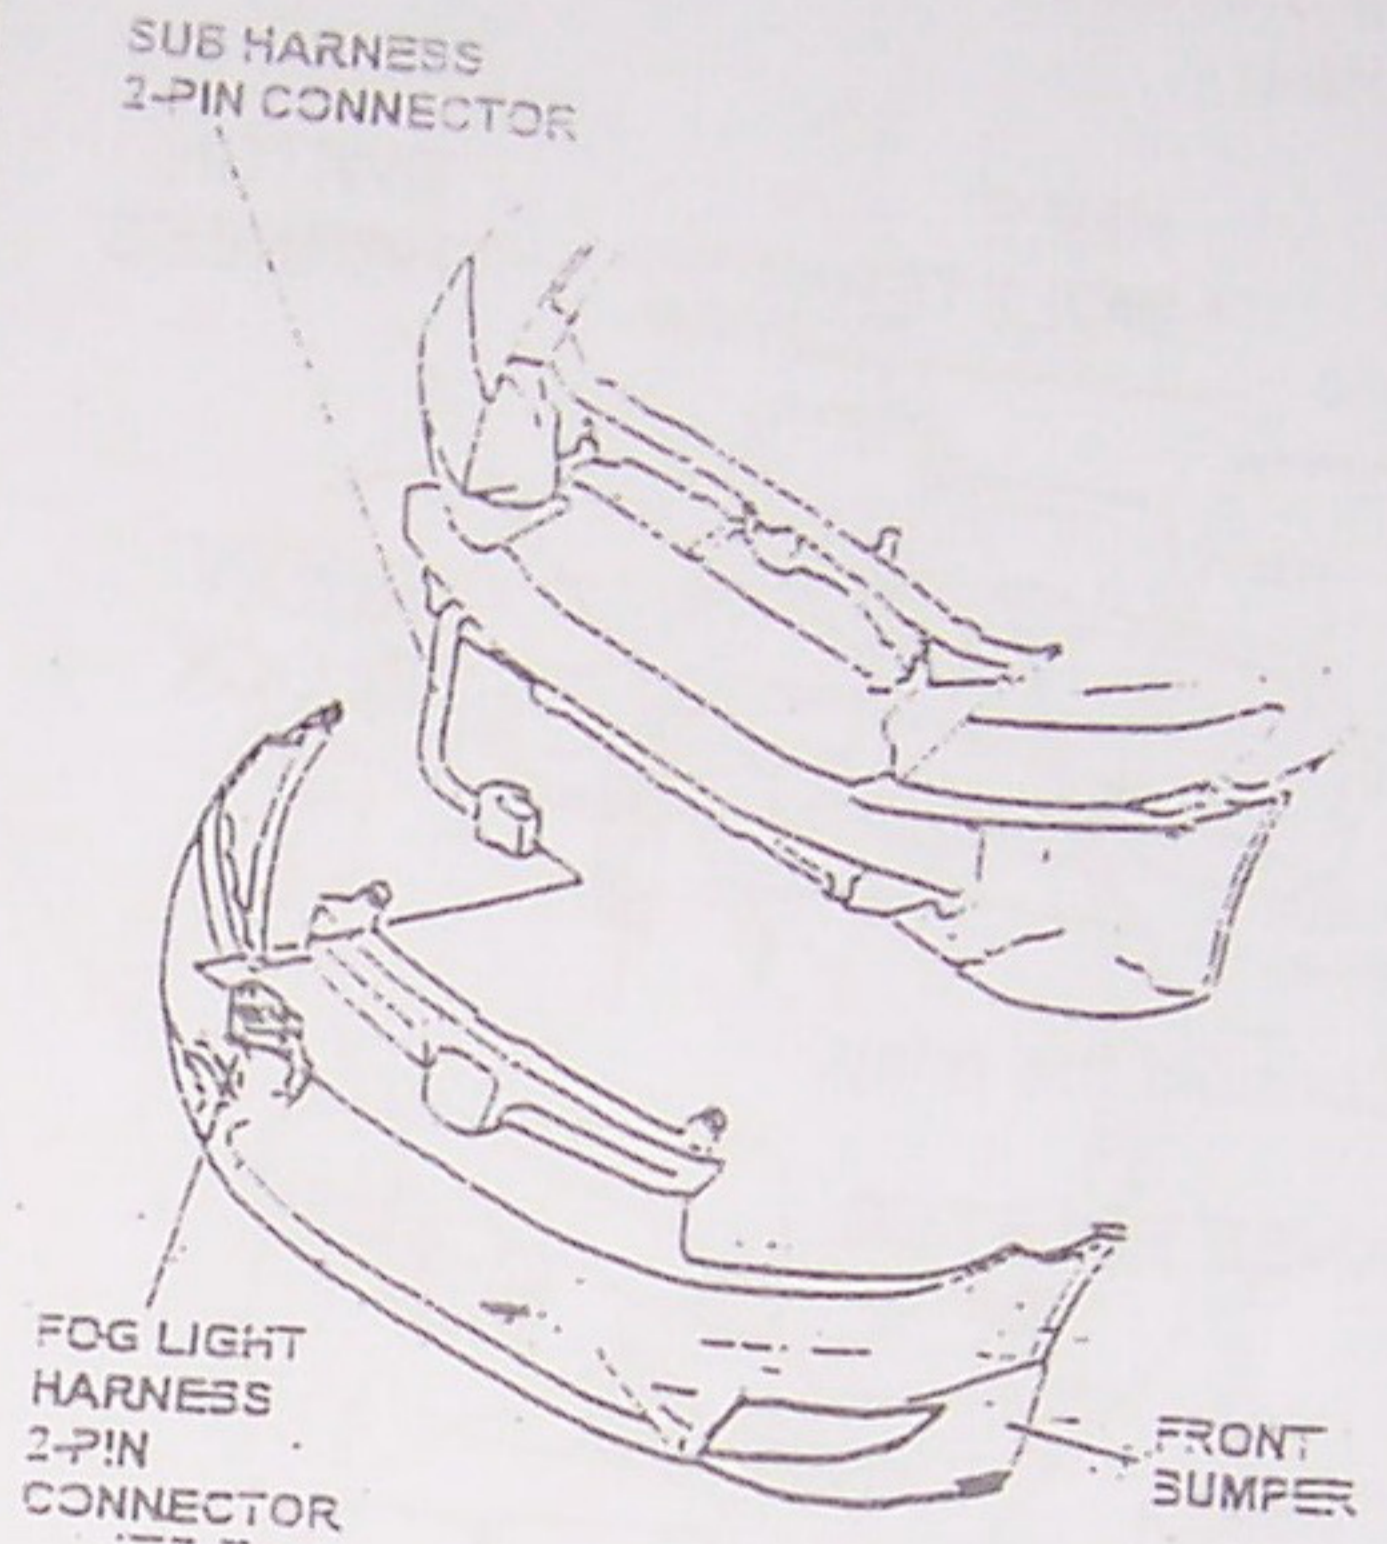


9. Tear-down the front bumper of fuse box.


10. Plug blue/white 6-pin connector of switch harness into 6-pin holes on fuse box.

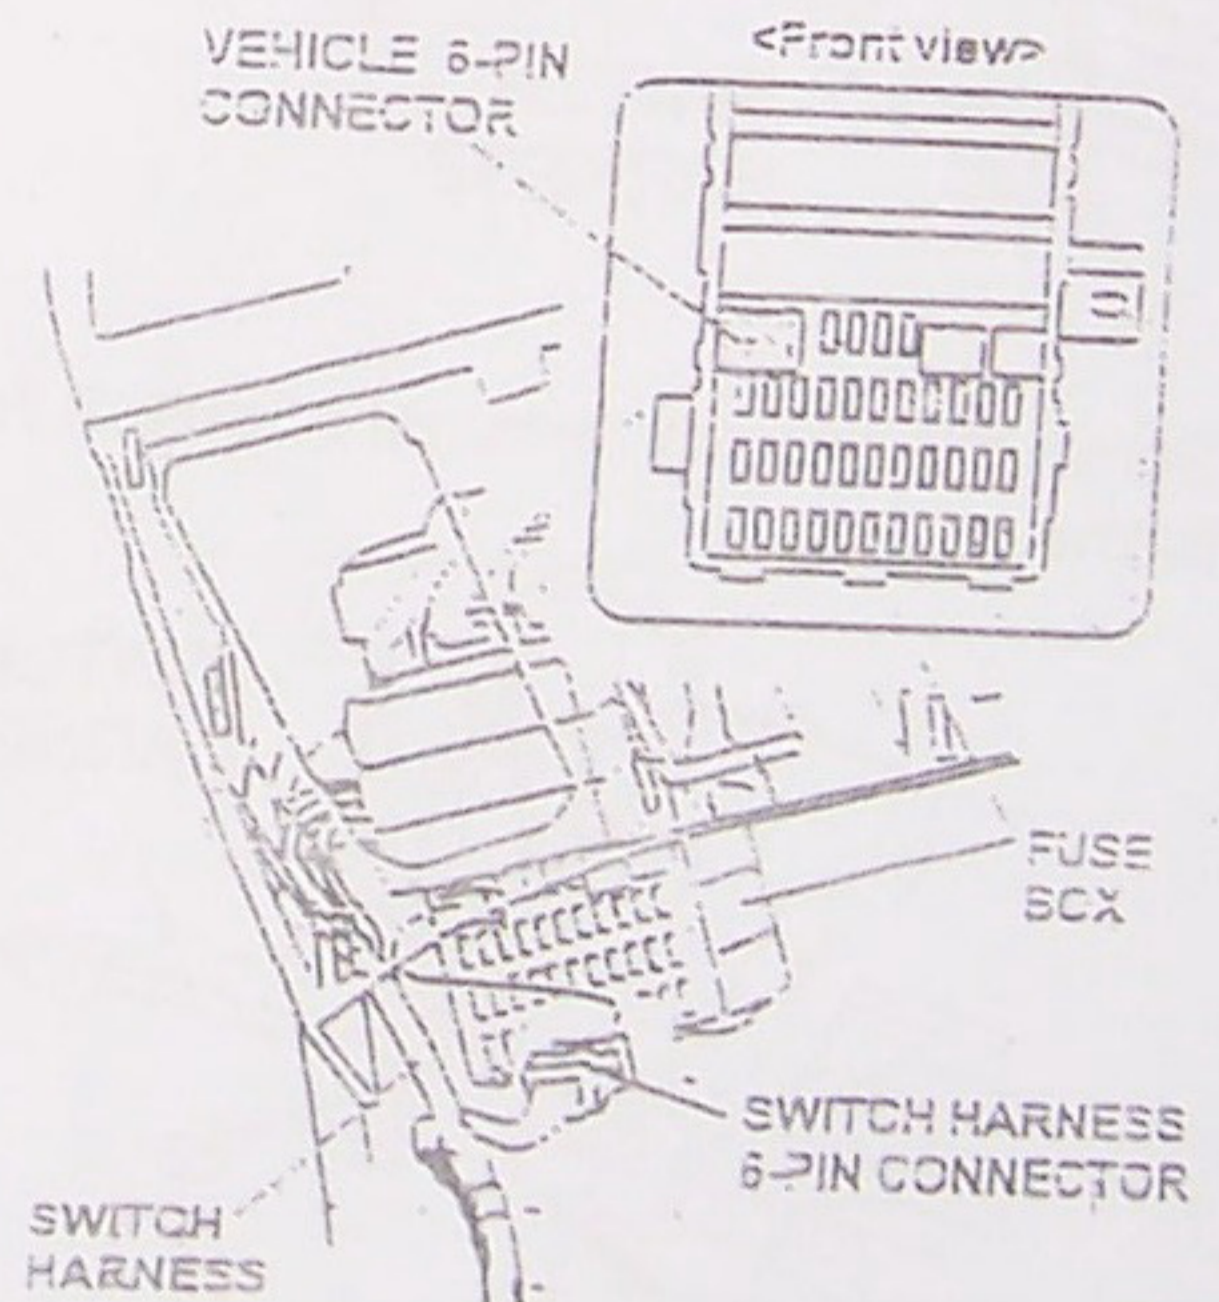


11. To put the switch harness that connects to the one side of relay block through knee bolster.

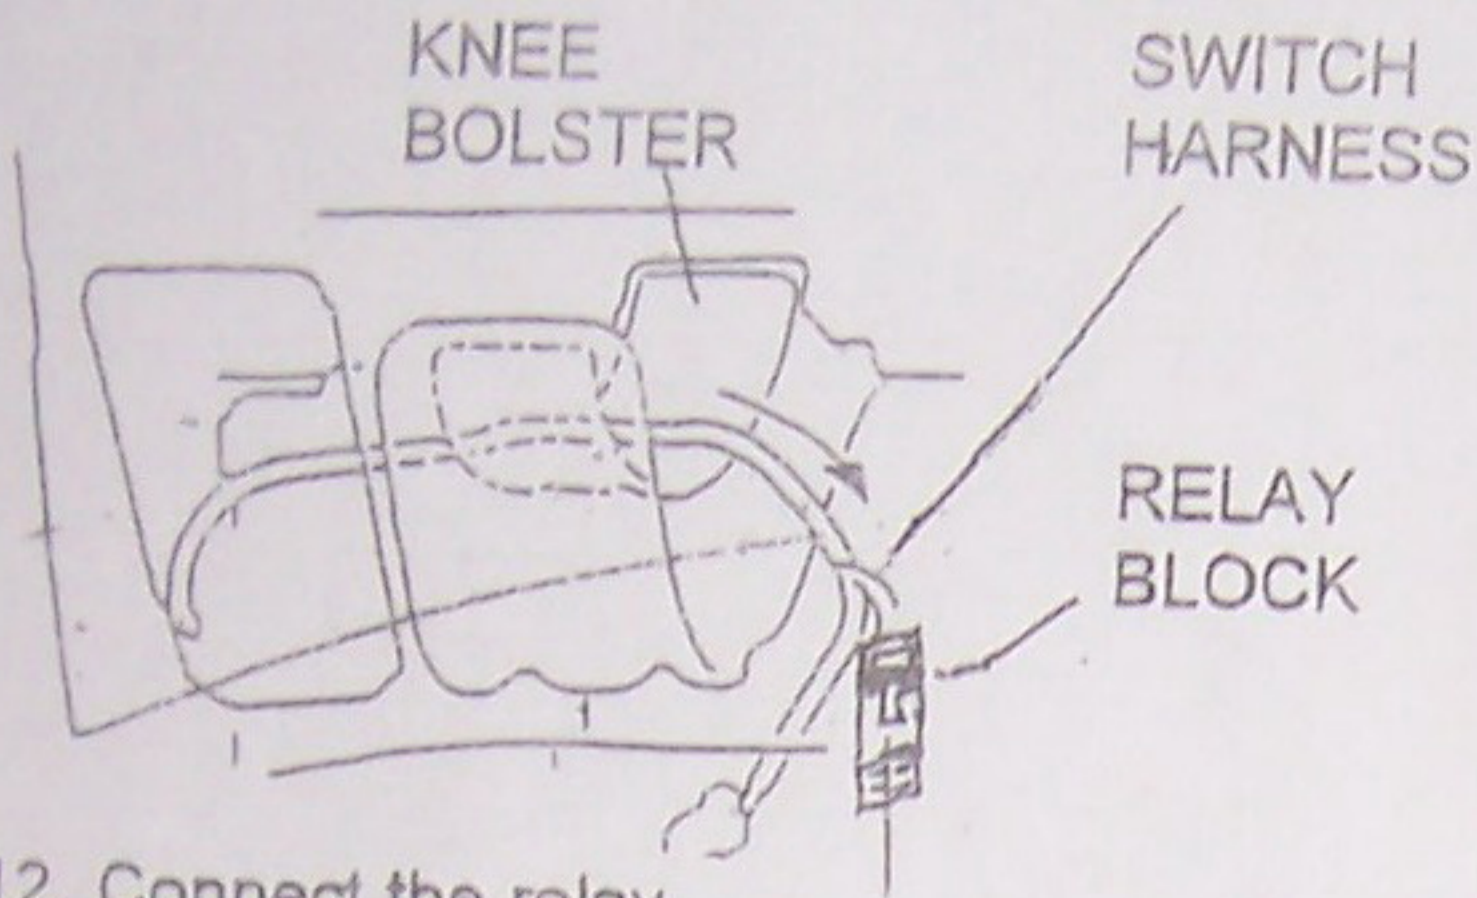


12. Connect the relay.

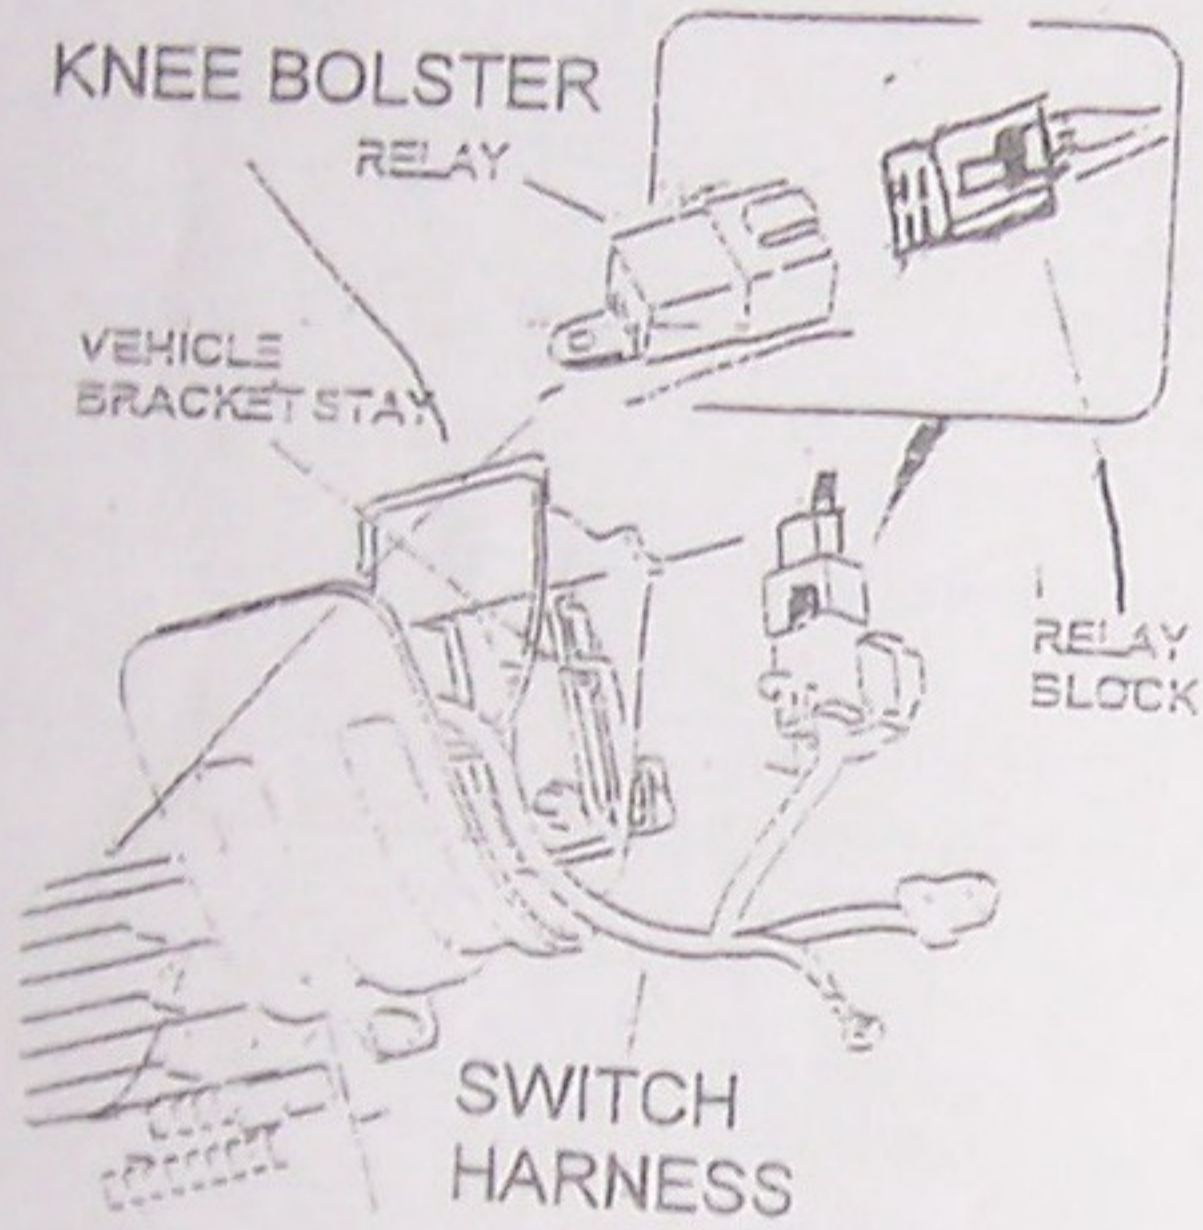


13. Screw the ground terminal of switch harness to the vehicle.

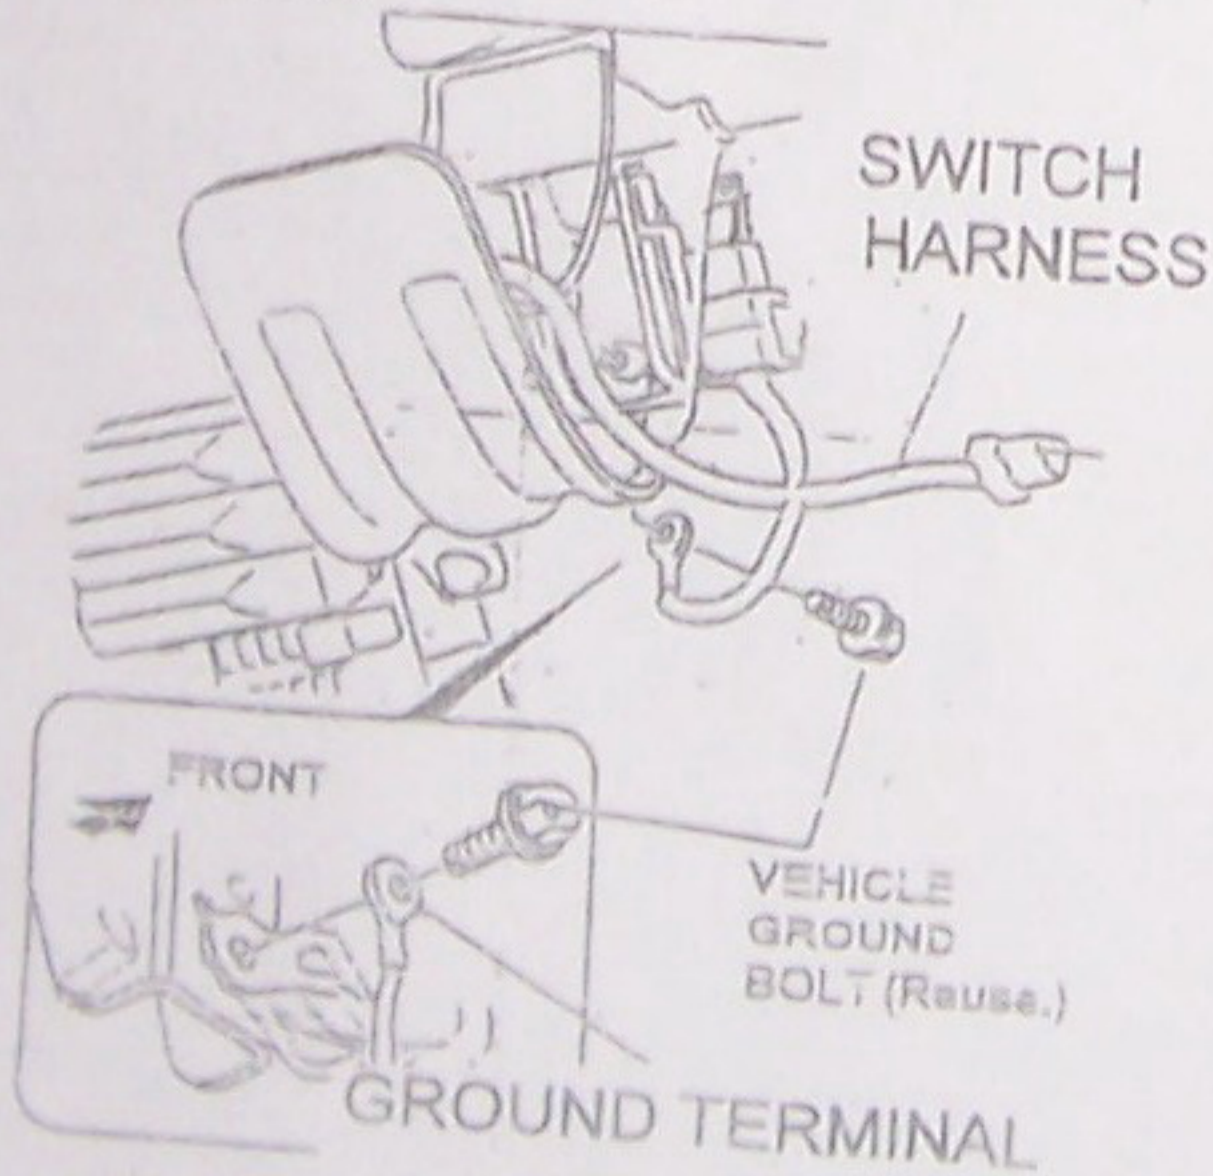


14. Connect the 1-pin connector of switch harness to the 1-pin connector of reserved vehicle harness.

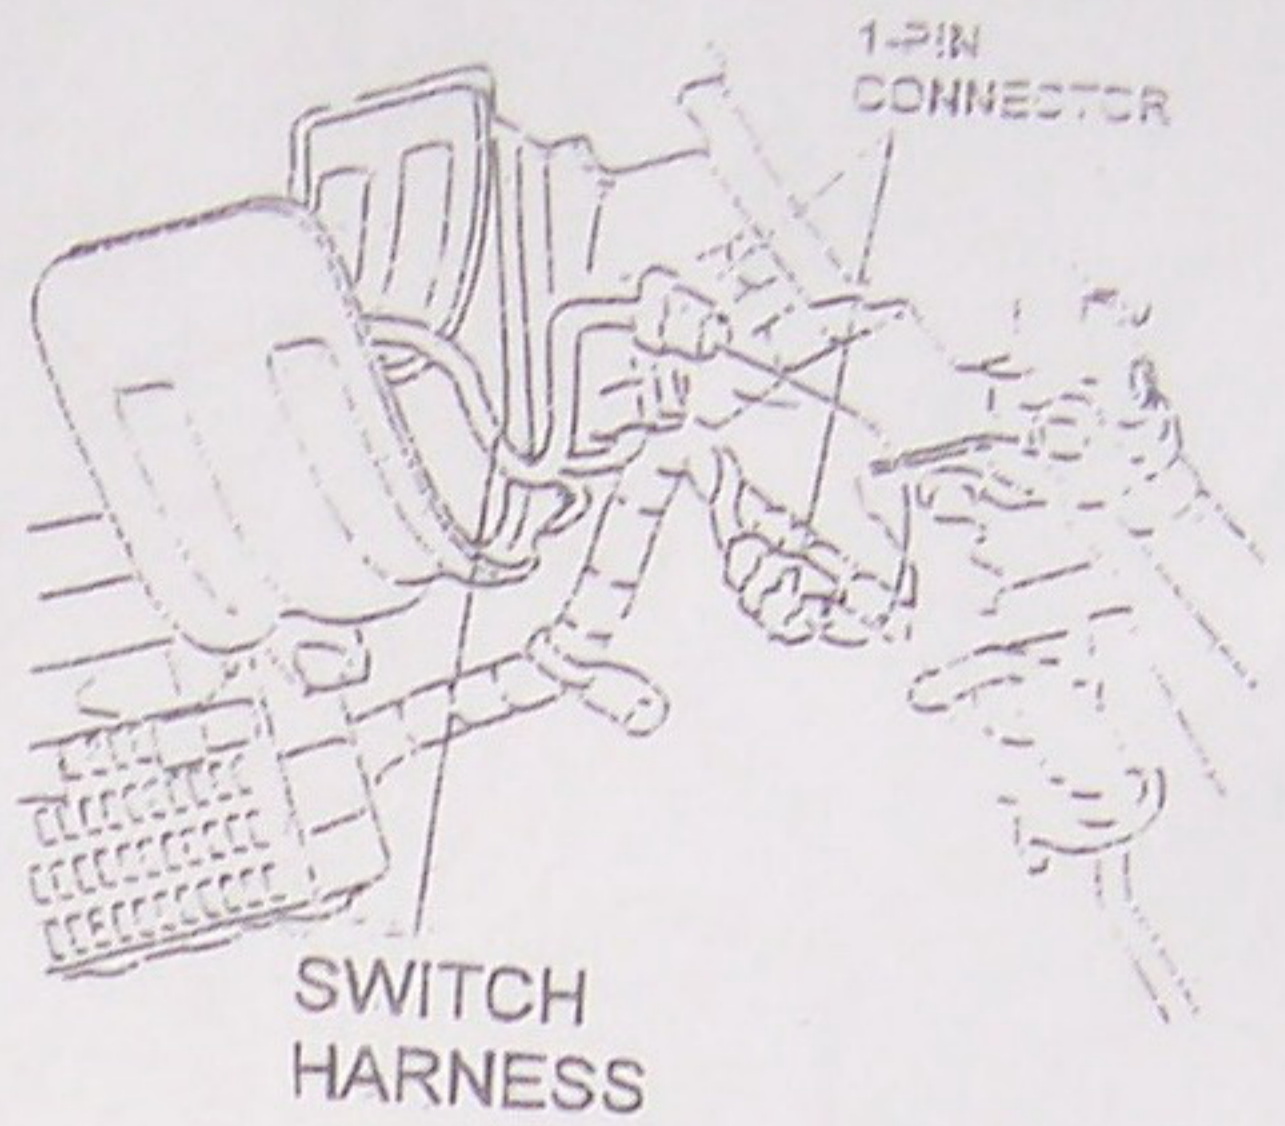

15. Install the switch on meter panel and plug the 5-pin connector of switch harness to the switch.

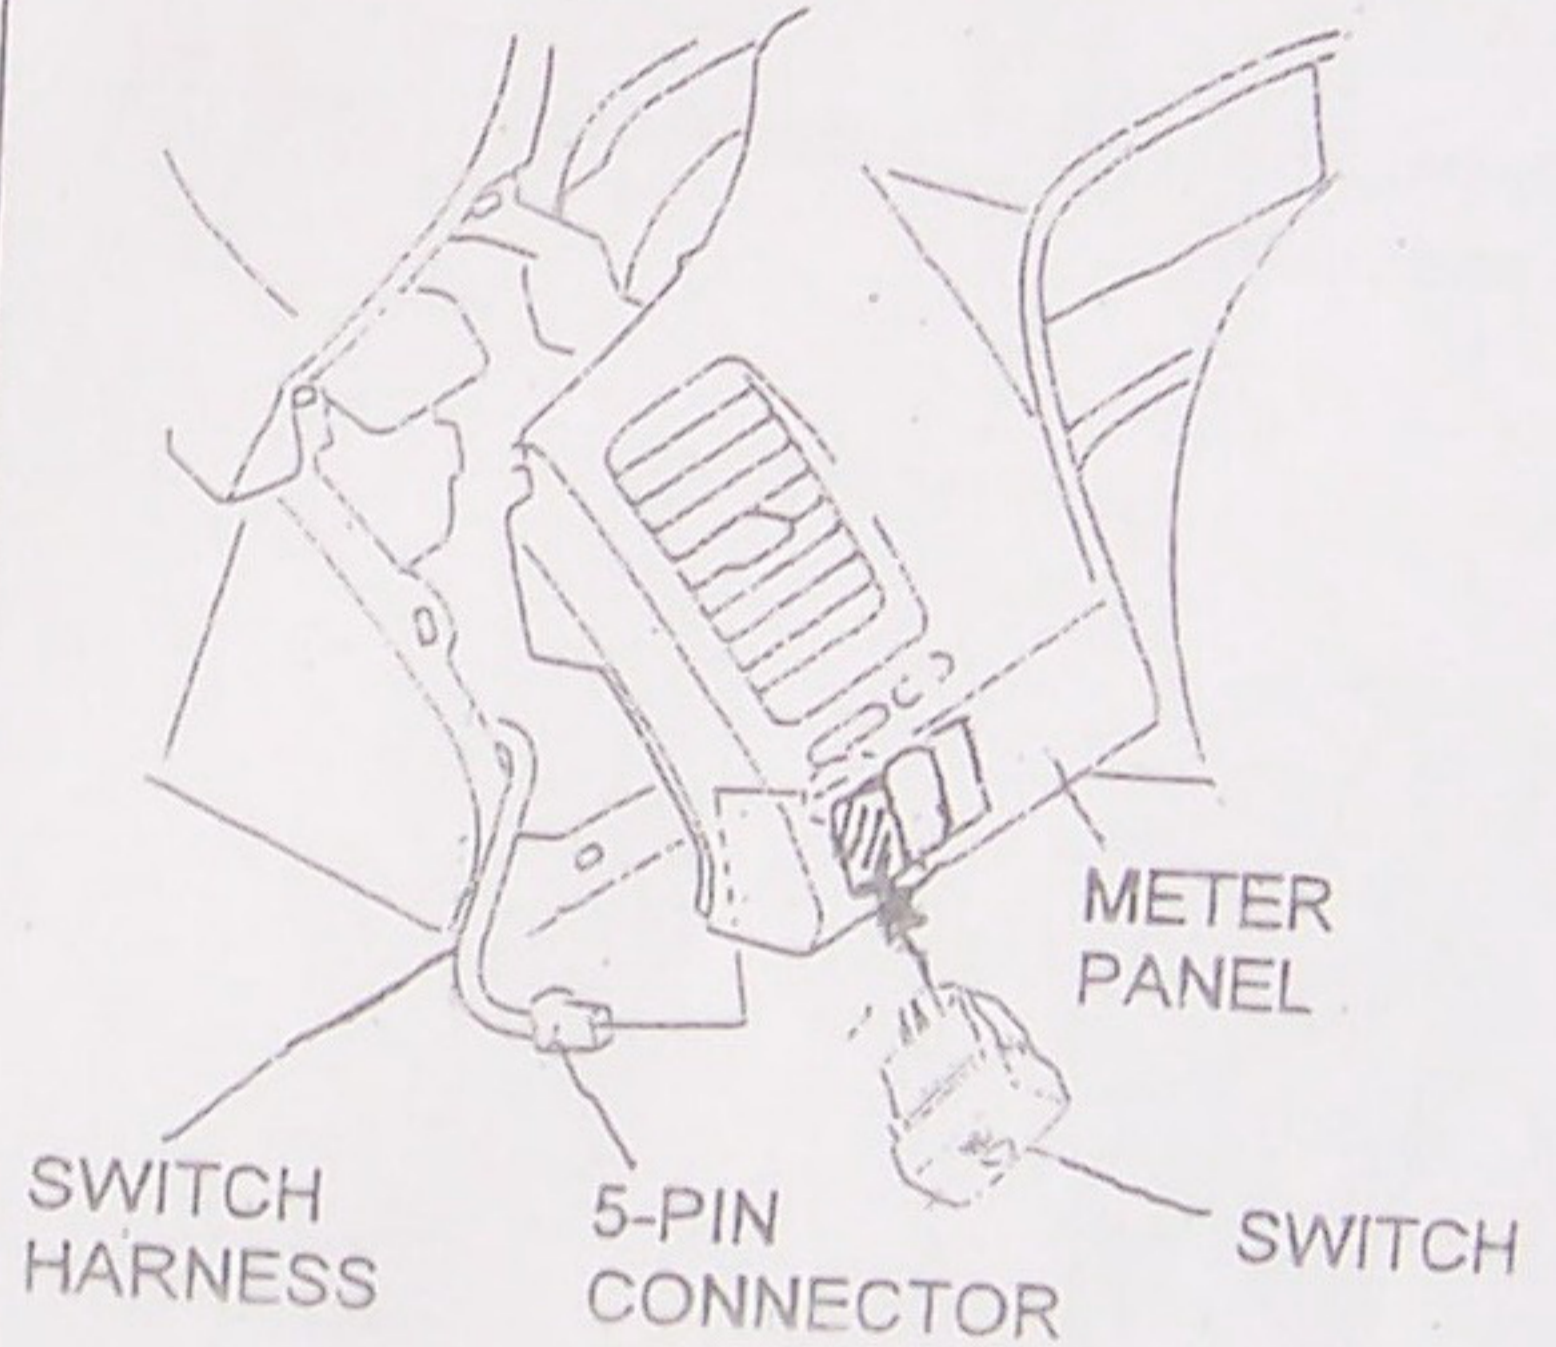

16. Install the 20A fuse into the fuse box in the location shown.

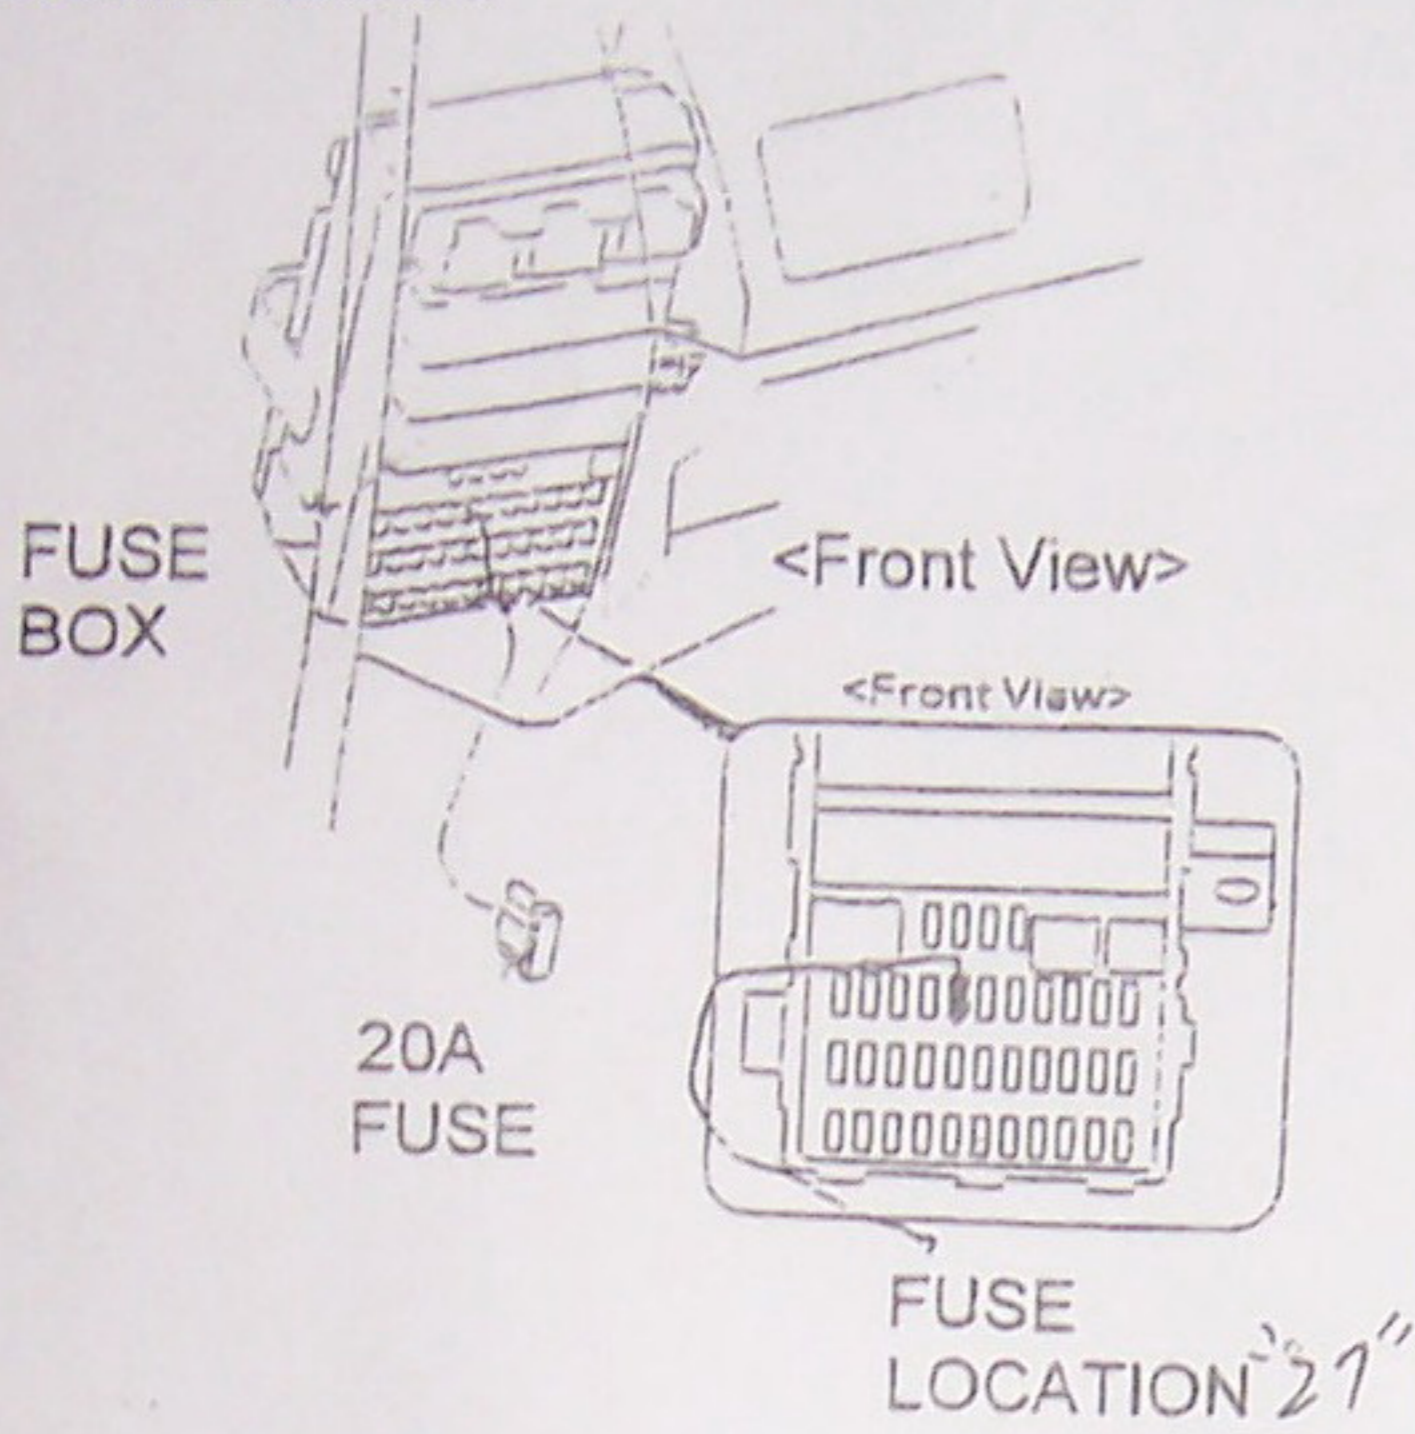

17. Restore.

Illustration of Fog Lights installed on the vehicle

